



# Inverter/Charger

---

# User Manual



UP2000-HM6021 / UP2000-HM6022

UP3000-HM5041 / UP3000-HM5042

UP3000-HM8041 / UP5000-HM8042

UP3000-HM10021 / UP3000-HM10022

# Contents

|  |    |
|--|----|
| Safety Instructions.....                                   | 1  |
| 1 General Information .....                                | 4  |
| 1.1 Overview .....   | 4  |
| 1.2 Identification of parts .....                          | 5  |
| 1.3 Naming rules.....                                      | 7  |
| 1.4 Connection diagram .....                               | 8  |
| 2 Installation Instructions.....                           | 9  |
| 2.1 General installation notes.....                        | 9  |
| 2.2 Before installation.....                               | 9  |
| 2.3 Determine the installation position .....              | 13 |
| 2.4 Install the inverter/charger.....                      | 13 |
| 2.5 Wiring.....  | 14 |
| 2.6 Operating the inverter/charger .....                   | 21 |
| 3 Interface.....   | 22 |
| 3.1 Indicator .....  | 22 |
| 3.2 Button.....  | 22 |
| 3.3 LCD.....   | 23 |
| 3.4 Operating mode .....                                   | 25 |
| 3.5 Settings .....   | 30 |
| 3.6 Battery discharge current limit.....                   | 45 |
| 4 Protections .....  | 46 |
| 5 Troubleshooting.....                                     | 48 |
| 5.1 Status reference.....                                  | 48 |
| 5.2 Solutions .....  | 49 |
| 6 Maintenance.....   | 50 |
| 7 Specifications .....                                     | 51 |
| Appendix 1 PV open-circuit voltage $V_S$ input power ..... | 56 |

# Safety Instructions






## Please reserve this manual for future review.

This manual contains all the instructions for safety, installation, and operation of the UPower-Hi series inverter/charger (below referred to as the inverter/charger).




### 1. Explanation of symbols

Please read related literature accompanying the following symbols to enable users to use the product efficiently and ensure personal and property safety.

The entire system should be installed by professional and technical personnel.

| Symbol  | Definition   |
|---|--|
| TIP   | Indicates any practical advice for reference.  |
|  | <b>IMPORTANT:</b> Indicates a critical tip during the operation, if ignored, may cause the device to run in error. |
|  | <b>CAUTION:</b> Indicates potential hazards, if not avoided, may cause the device damaged.                         |
|  | <b>WARNING:</b> Indicates the danger of electric shock, if not avoided, would cause casualties.                    |
|  | <b>WARNING HOT SURFACE:</b> Indicates the risk of high temperature, if not avoided, would cause scalds.            |
|  | Read the user manual carefully before any operation.   |

### Symbols of the inverter/charger

|   |  |
|---|--|
|    | This symbol indicates that after disconnecting the inverter from the grid and battery bank, you should wait for ten minutes before touching the internal conductive devices. |
|  | Read the instructions before performing any operation on the inverter.   |
|  | Danger! Electric Shock Risk!<br>There are live devices here, only professional and qualified personnel can install and operate it.   |

### 2. Requirements for professional and technical personnel

- Professionally trained;
- Familiar with related safety specification for the electrical system;
- Read this manual carefully and master related safety cautions.

### **3. Professional and technical personnel is allowed to do**

- Install the inverter/charger to a specified location;
- Conduct trial operations for the inverter/charger;
- Operate and maintain the inverter/charger.

### **4. Safety cautions before installation**

- When you receive the inverter/charger, check whether there is any damage that occurred in transportation. Contact the transportation company or our company in time for any problem.
- When storing or moving the inverter/charger, follow the instructions in the manual.
- When installing the inverter/charger, you must evaluate whether the operation area exists any arc danger.
- Do not store the inverter/charger where children can touch it.
- The inverter/charger is off-grid type. Therefore, the AC output is strictly prohibited from being connected to the grid; otherwise, the inverter/charger would be damaged.
- The inverter/charger is only allowed for stand-alone operation. Connecting multiple units' output in parallel or series would damage the inverter/charger.

### **5. Safety cautions for mechanical installation**

- Before installation, make sure the inverter/charger has no electrical connection.
- Ensure the inverter/charger installation's heat dissipation space. Do not install the inverter/charger in humid, greasy, flammable, explosive, dust accumulative, or other severe environments.

### **6. Safety cautions for electrical connection**

- Check if all the wiring connections are tight to avoid the danger of heat accumulation due to a loose connection.
- The protective grounding must be connected to the ground. The cross-section of the wire should not be less than 4mm<sup>2</sup>.
- A circuit breaker should be used between the battery and the inverter/charger; the circuit breaker's value should be twice the inverter/charger rated input current.
- DO NOT put the inverter/charger close to the flooded lead-acid battery because the terminals' sparkle may ignite the hydrogen released by the battery.
- The AC output port is only connected to the load. Therefore, it is strictly forbidden to connect other power sources or utilities. Otherwise, the damage will be caused to the inverter/charger. Also, turn off the inverter/charger before any installation.
- Both utility input and AC output are of high voltage, do not touch the wiring connection to avoid electric shock.

### **7. Safety cautions for inverter/charger operation:**

- When the inverter/charger is working, its heat sink and casing will generate a lot of heat; the

temperature would be very high. Please do not touch it.

- When the inverter/charger is working, please do not open the inverter/charger cabinet to operate.
- When eliminating the faults or disconnecting the DC input, turning off the inverter/charger's switch, then carry out the operation after the LCD screen is completely OFF.

#### 8. The dangerous operations which would cause electric arc, fire, or explosion:

- Touch the wire end that hasn't been insulation treated and maybe electriferous.
- Touch the wiring copper row or internal devices that may be electriferous.
- The power cable connection is loose.
- Screw or other spare parts inadvertently falls into the inverter/charger.
- **Incorrect operations are carried by untrained non-professional, or technical personnel.**



**WARNING**

Once an accident occurs, it must be handled by professional and technical personnel. Improper operations would cause more serious accidents.

#### 9. Safety cautions for stopping the inverter/charger

- Firstly turn off the breakers on the utility input side and AC output side, then turn off the DC switch;
- After the inverter/charger stops for ten minutes, the internal conductive devices could be touched;
- The inverter/charger can be restarted after removing the faults which may affect its safety performance;
- No maintenance parts in the inverter/charger. If any maintenance service is required, please contact our after-sales service personnel.



**WARNING**

Do NOT touch or open the shell after the inverter is powered off within ten minutes.

#### 10. Safety cautions for inverter/charger maintenance:

- Testing equipment is recommended to check the inverter/charger to make sure there is no voltage or current;
- When conducting electrical connection and maintenance work, must post temporary warning sign or put up barriers to prevent unrelated personnel from entering the electrical connection or maintenance area;
- Improper maintenance operation to the inverter/charger may cause personal injury or equipment damage;
- **Wear an antistatic wrist strap, or avoid unnecessary contact with the circuit board.**



**CAUTION**

The safety mark, warning label, and nameplate on the inverter/charger should be visible, not removed, or covered.

# 1 General Information

## 1.1 Overview

UPower-Hi, an upgrade hybrid inverter charger, supports utility charging, oil generator charging<sup>①</sup>, solar charging, utility output, inverter output, and energy management. The DSP chip in the product with an advanced control algorithm brings high response speed and high conversion efficiency. In addition, this product adopts an industrial design to ensure high reliability and features multiple charging and output modes.

The new optimized MPPT charging technology fastly tracks the solar panels' max power point in any situation and obtains the maximum energy in real-time.

The AC to DC charging process adopts the advanced control algorithm to realize a full digital PFC and dual closed-loop control of voltage and current. As a result, the DC output charging voltage and current are continuously adjustable within a specific range.

The DC to AC inverting process, based on a fully smart digital design, adopts advanced SPWM technology to get a pure sine wave output. The inverting process converts the DC power to AC power, suitable for household appliances, power tools, industrial equipment, audio systems, and other electronics.

The 4.2-inch LCD shows the operational status and full parameters.

To maximize solar energy utilization, users can choose energy sources according to actual needs and flexibly take the utility as a supplement. This inverter charger can increase the system's power supply guarantee rate, which is suitable for solar energy, utility/oil generator hybrid systems. It aims to provide users with high-quality, high-stability, and high-reliability electrical energy.


### Features


- Full intelligent digital energy storage equipment
- Supports the battery mode or non-battery mode
- Non-battery mode: charging with solar (Main) and utility (Assist) simultaneously
- (Optional) Surge and reverse connection protections to support the lithium battery system perfectly
- Advanced SPWM technology and pure sine wave output
- PFC technology achieves a high power factor of AC to DC charging and reduces grid capacity usage
- Full digital double closed-loop control
- High tracking efficiency of MPPT no less than 99.5%
- Three charging modes: Solar only, Solar priority, Utility & Solar
- Two AC output modes: Utility priority and Inverter priority

- Self-learning SOC display function
- Multiple LED indicators to dynamic display the status
- AC OUT button to control the AC output directly
- 4.2 inch LCD to monitor and modify system parameters
- Remote temperature compensation for batteries
- Optional WiFi or GPRS Remote control by the RS485 isolated com. port
- Optional BMS-Link port, taking the charging and discharging control from BMS
- Customized charging current and discharging limited current
- Supports cold start and soft start
- Comprehensive electronic protection features

① The oil generator, connected to the UPower-Hi AC input terminal, must be a digital inverter generator; otherwise, the AC charging and utility will not work properly.

## 1.2 Identification of parts

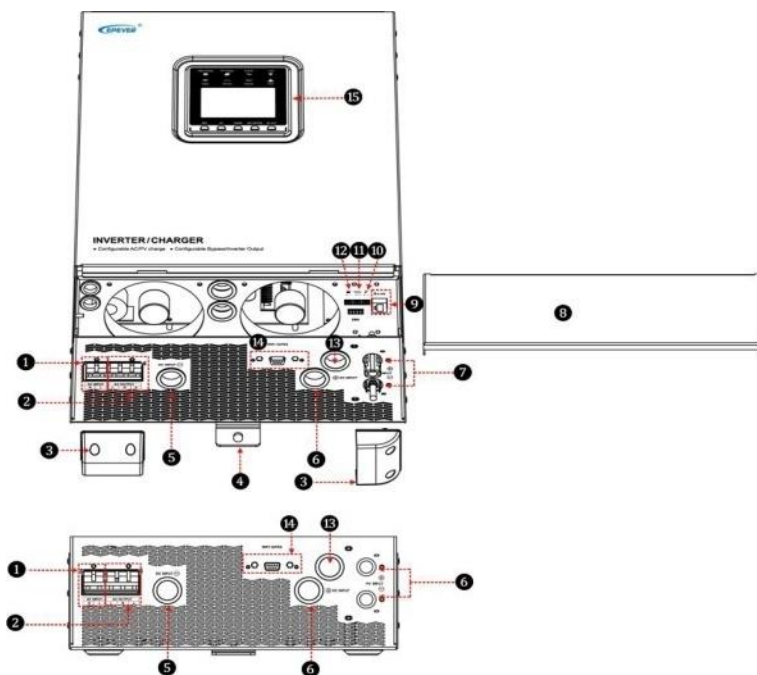

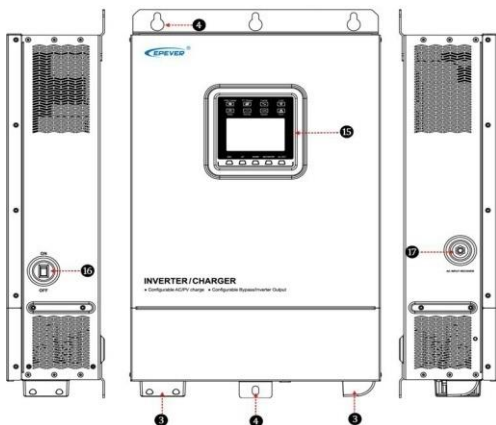

|   |  |   |  |
|---|--|---|--|
| ① | Utility input terminal   | ⑩ | RTS interface  |
| ② | AC output terminal   | ⑪ | Dry contact interface <sup>②</sup>   |
| ③ | Terminal covers  | ⑫ | RBVS interface   |
| ④ | Mounting holes (4 Total)   | ⑬ | Cable hole   |
| ⑤ | Battery negative input terminal  | ⑭ | RS485 interface(DB9 female, with isolation design) <sup>③</sup> 5VDC/200mA |
| ⑥ | Battery positive input terminal  |   |  |
| ⑦ | PV input terminal (MC4)  | ⑮ | LCD  |
| ⑧ | External cover   | ⑯ | Power switch   |
| ⑨ | BMS-Link connection port(RJ45, without isolation design) <sup>①</sup> 5VDC/200mA | ⑰ | Utility overcurrent protector  |

#### ① BMS-Link connection port (RJ45)

##### + Function:

Through a BMS-Link converter, different lithium battery manufacturers' BMS protocols can be converted into our company's standard BMS protocol. In addition, it realizes the communication between the inverter/charger and the BMS.

##### + RJ45 pin definition:



 
| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1   | +5VDC      | 5   | RS485-A    |
| 2   | +5VDC      | 6   | RS485-A    |
| 3   | RS485-B    | 7   | GND        |
| 4   | RS485-B    | 8   | GND        |



**CAUTION**


Please refer to the "UPower-Hi-Attachment" or contact our technical supporters for the currently supported BMS manufacturers and the BMS parameters.

## ② Dry contact interface



- + **Working principle:** When the battery voltage reaches the dry contact ON voltage (DON), the dry contact is connected. Its coil is energized. The dry contact can drive resistive loads of no more than 125VAC /1A, 30VDC/1A. According to different battery types of the inverter charger, the default values of the dry contact ON (DON) voltage and the dry contact OFF(DOF) voltage are different. Please refer to the chapter **3.5 Settings** > item **19 DON** and item **20 DOF** for details.

## ③ RS485 interface (DB9 female)

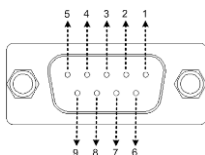

DB9 pin definition for RTU-type UP-Hi series:


| Pin | Definition                | Pin | Definition |
|-----|---------------------------|-----|------------|
| 1-2 | NC                        | 6   | NC         |
| 3   | +12VDC                    | 7   | RS485-A    |
| 4   | GND2(+12VDC power ground) | 8   | RS485-B    |
| 5   | GND1(+5VDC power ground)  | 9   | +5VDC      |

DB9 pin definition for other types UP-Hi series:

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1-4 | NC         | 7   | RS485-A    |
| 5   | GND        | 8   | RS485-B    |
| 6   | NC         | 9   | +5VDC      |

## 1.3 Naming rules

UP 5000 - H M 80 4 2 (RTU / NLDC)

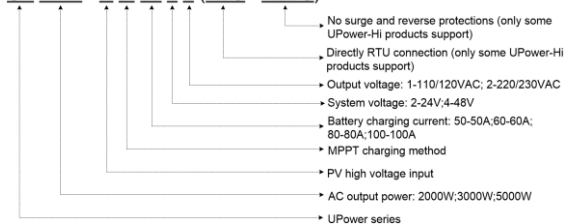


## Instructions:


| Product Model Suffix | Functions                   |                |
|----------------------|-----------------------------|----------------|
|                      | Anti-surge and anti-reverse | RTU connection |
| No (Regular models)  | ✓                           | ✗              |
| RTU                  | ✓                           | ✓              |
| NLDC                 | ✗                           | ✗              |

## 1.4 Connection diagram

- No battery mode

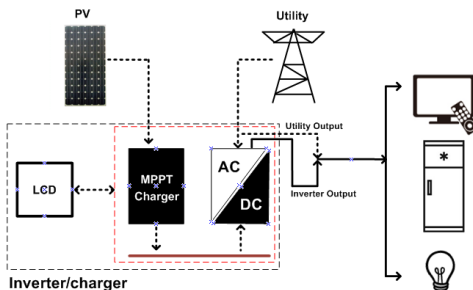

- Battery mode

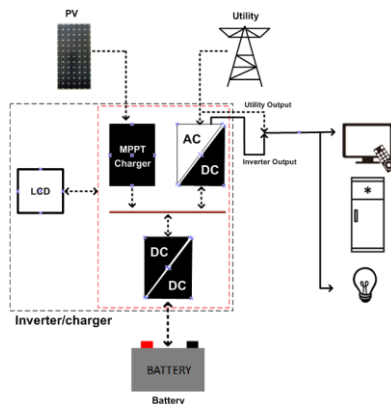

**Supported battery types:** AGM、GEL、FLD、LFP8/LFP15/LFP16、LNCM7/LNCM14

|                    |  |
|--------------------|--|
| <br><b>WARNING</b> | AC loads shall be determined according to the output power of the inverter/charger. The load exceeding the maximum output power may damage the inverter/charger.                                     |
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>For different battery types, confirm the relevant parameters before power on.</li> <li>No-battery mode and battery mode can set by setting item 0.</li> </ul> |

## 2 Installation Instructions

### 2.1 General installation notes

- Read all the installation instructions carefully in the manual before installation.
- Be very careful when installing the batteries. Please wear eye protection when installing the open-type lead-acid battery, and rinse with clean water in time for battery acid contact.
- Keep the battery away from any metal objects, which may cause a short circuit of the battery.
- Acid gas may be generated when the battery is charged. Ensure that the surrounding environment is well ventilated.
- The inverter/charger requires enough clearance above and below for proper airflow. Do not install the inverter/charger and the lead-acid liquid battery in the same cabinet to avoid the batteries' acid gas from corroding the inverter/charger.
- Only charge the batteries within the control range of this inverter/charger.
- Loose power connections and corroded wires may result in high heat that can melt wire insulation, burn surrounding materials, or even cause a fire. Ensure tight connections and secure cables with clamps to prevent them from swaying while moving the inverter/charger.
- Select the system cables according to the current density of not more than  $3.5A/mm^2$  (according to the National Electrical Code Article 690 NFPA70.)
- Avoid direct sunlight and rain infiltration when installing it outdoor.
- After turn off the power switch, there is still high voltage inside the inverter/charger. Therefore, do not open or touch the internal components and perform related operations after the capacitor's total discharge.
- Do not install the inverter/charger in a harsh environment such as humid, greasy, flammable, explosive, or dust accumulation.
- The DC input terminal is equipped with reverse polarity protection. Therefore, the reverse connection of the DC input terminal will not cause fatal damage to the product. However, it is strongly recommended to connect the inverter/charger with the PV array and utility after normal running.
- Both utility input and AC output are of high voltage, do not touch the wiring connection to avoid electric shock.
- To prevent injury, do not touch the fan while it is working.

### 2.2 Before installation

#### 2.2.1 Check the pack list

- Inverter/charger 1 pcs

- User manual 1ps
- Included accessories 1pcs(Details refer to the "Accessories list" file shipped with the inverter/charger.)

## 2.2.2 Prepare modules

### 1) Battery

- **Recommended wire size of the battery and the circuit breaker is as below.**

| Model          | Battery wire size       | Circuit breaker | Ring terminal |
|----------------|-------------------------|-----------------|---------------|
| UP2000-HM6021  | 20mm <sup>2</sup> /4AWG | 2P—125A         | RNB38-8S      |
| UP2000-HM6022  | 20mm <sup>2</sup> /4AWG | 2P—125A         | RNB38-8S      |
| UP3000-HM5041  | 16mm <sup>2</sup> /5AWG | 2P—100A         | RNB22-8       |
| UP3000-HM5042  | 16mm <sup>2</sup> /5AWG | 2P—100A         | RNB22-8       |
| UP3000-HM8041  | 16mm <sup>2</sup> /5AWG | 2P—100A         | RNB22-8       |
| UP3000-HM10021 | 35mm <sup>2</sup> /1AWG | 2P—200A         | RNB38-8S      |
| UP3000-HM10022 | 35mm <sup>2</sup> /1AWG | 2P—200A         | RNB38-8S      |
| UP5000-HM8042  | 35mm <sup>2</sup> /1AWG | 2P—200A         | RNB38-8S      |



**WARNING**

- The actual battery wire size must be no less than the recommended wire size!
- If the actual battery wire size is less than the recommended wire size, a circuit breaker, whose current determined by the actual load current, must be installed on the battery side.
- We are not liable for any damage caused by the choice of inappropriate wire size and the absence of circuit breaker or external fuse.

- **Making the battery connection wire**

**Step1:** Ring terminal 2pcs (included accessories).

**Step2:** Battery positive and negative connection wires 2 pcs(red +, black -). The wire length is determined according to the customer's actual requirement.

**Step3:** Strip one end of the battery connection wire for about d mm (size d is determined according to the ring terminal).

**Step4:** Pass the exposed wire through the ring terminal, and secure the wire firmly with a wire clamp.



### 2) AC Load

- **Recommended wire size of the AC load and the circuit breaker is as below.**

| Model         | Load wire size            | Circuit breaker | Torque |
|---------------|---------------------------|-----------------|--------|
| UP2000-HM6021 | 6mm <sup>2</sup> /9AWG    | 2P—40A          | 1.2N.M |
| UP2000-HM6022 | 3.4mm <sup>2</sup> /12AWG | 2P—16A          | 1.2N.M |

|                |                         |        |        |
|----------------|-------------------------|--------|--------|
| UP3000-HM5041  | 6mm <sup>2</sup> /9AWG  | 2P—40A | 1.2N.M |
| UP3000-HM5042  | 4mm <sup>2</sup> /11AWG | 2P—25A | 1.2N.M |
| UP3000-HM8041  | 6mm <sup>2</sup> /9AWG  | 2P—40A | 1.2N.M |
| UP3000-HM10021 | 6mm <sup>2</sup> /9AWG  | 2P—40A | 1.2N.M |
| UP3000-HM10022 | 4mm <sup>2</sup> /11AWG | 2P—25A | 1.2N.M |
| UP5000-HM8042  | 6mm <sup>2</sup> /9AWG  | 2P—40A | 1.2N.M |

- **Making the connection wire of the AC load:**

Strip the AC load connection wires (3 pcs) for about 10 mm.



| Symbols | Abbreviation | Name         | Color           |
|---------|--------------|--------------|-----------------|
| L       | LINE         | Live wire    | Brown/black     |
| N       | Neutral      | Neutral line | Blue            |
|         | —            | Ground line  | Yellowish green |

### 3) PV modules

- **Recommended wire size of the PV module and the circuit breaker is as below.**

Since the PV array's output current varies with the type, connection method, or sunlight angle, its minimum wire size can be calculated by the short circuit current(ISC). Please refer to the ISC value in the PV module's specifications. When the PV modules are connected in series, the total ISC equals any PV module's ISC. When the PV modules are connected in parallel, the total ISC equals all PV modules' ISC. Please refer to the table below:

| Model          | PV wire size            | Circuit breaker |
|----------------|-------------------------|-----------------|
| UP2000-HM6021  | 6mm <sup>2</sup> /9AWG  | 2P—40A          |
| UP2000-HM6022  | 4mm <sup>2</sup> /11AWG | 2P—25A          |
| UP3000-HM5041  | 6mm <sup>2</sup> /9AWG  | 2P—40A          |
| UP3000-HM5042  | 6mm <sup>2</sup> /9AWG  | 2P—40A          |
| UP3000-HM8041  | 10mm <sup>2</sup> /7AWG | 2P—50A          |
| UP3000-HM10021 | 6mm <sup>2</sup> /9AWG  | 2P—40A          |
| UP3000-HM10022 | 6mm <sup>2</sup> /9AWG  | 2P—40A          |
| UP5000-HM8042  | 6mm <sup>2</sup> /9AWG  | 2P—40A          |

- **Making the connection wire of the PV module:**

**Step1:** Each MC4 male terminal and female terminal 1pcs(included accessories)

**Step2:** PV module positive and negative connection wires 2 pcs(red +, black -). The wire length is determined according to the customer's actual requirement.

**Step3:** Strip one end of the PV module positive wire for about 5mm, and press the exposed wire to the inner core of the MC4 male terminal, as shown below:



**Step4:** Tight press the copper wire and the MC4 male terminal's inner core with a plier and ensure the connection is secure.



**Step5:** Unscrew the nut of the MC4 male terminal, insert the inner core into the MC4 terminal, and screw the nut.



**Step6:** Strip one end of the PV module negative wire for about 5mm, and press the exposed wire to the inner core of the MC4 female head, as shown below:



**Step7:** Tight press the copper wire and the MC4 female head's inner core with a plier and ensure the connection is secure.



**Step8:** Unscrew the nut of the MC4 female terminal, insert the inner core into the MC4 terminal, and screw the nut.



#### 4) Utility input

- Recommended wire size of the utility input and the circuit breaker is as below.

| Model          | Utility wire size         | Circuit breaker | Torque |
|----------------|---------------------------|-----------------|--------|
| UP2000-HM6021  | 6mm <sup>2</sup> /9AWG    | 2P—40A          | 1.2N.M |
| UP2000-HM6022  | 3.4mm <sup>2</sup> /12AWG | 2P—16A          | 1.2N.M |
| UP3000-HM5041  | 6mm <sup>2</sup> /9AWG    | 2P—40A          | 1.2N.M |
| UP3000-HM5042  | 4mm <sup>2</sup> /11AWG   | 2P—25A          | 1.2N.M |
| UP3000-HM8041  | 6mm <sup>2</sup> /9AWG    | 2P—40A          | 1.2N.M |
| UP3000-HM10021 | 6mm <sup>2</sup> /9AWG    | 2P—40A          | 1.2N.M |
| UP3000-HM10022 | 4mm <sup>2</sup> /11AWG   | 2P—25A          | 1.2N.M |
| UP5000-HM8042  | 6mm <sup>2</sup> /9AWG    | 2P—40A          | 1.2N.M |

- Making the connection cable of the utility input:**

Strip two connection wires of the utility input for about 10 mm.




| Symbols | Abbreviation | Name      | Color       |
|---------|--------------|-----------|-------------|
| L       | LINE         | Live wire | Brown/black |

 
|   |         |              |      |
|---|---------|--------------|------|
| N | Neutral | Neutral line | Blue |
|---|---------|--------------|------|

## 2.3 Determine the installation position


**Step1:** Remove mounting plate 1 and mounting plate 2 behind the inverter/charger with a screwdriver.

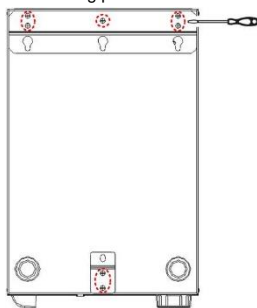



**Step2:** Mark the installation position with the mounting plate 1. The distance between the two mounting holes is 300mm.

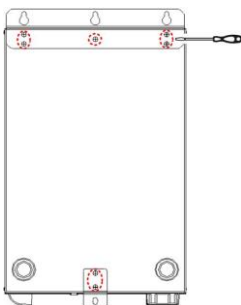

**Step3:** Rotate the direction of mounting plate 1 and plate 2, install them again.




## 2.4 Install the inverter/charger

|   |   |
|---|---|
| <br><b>WARNING</b> | <p>Risk of explosion! Never install the inverter/charger in a sealed enclosure with flooded batteries! Do not install the inverter/charger in a confined area where the battery gas can accumulate.</p> |
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>The inverter/charger can be fixed to the concrete and solid brick walls and cannot be fixed to the hollow brick wall.</li> </ul>                                 |

- The inverter/charger requires at least 20cm of clearance right and left and 50cm of clearance above and below.

**Step1:** Determine the installation location and heat-dissipation space.

The inverter/charger requires at least 20cm of clearance right and left and 50cm of clearance above and below.

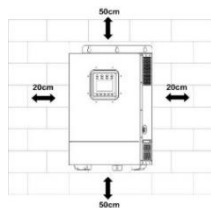

**Step2:** According to the installation position marked with the mounting plate 1, drill two M10 holes with an electric drill.


**Step3:** Insert the screws of the M8 bolts and the steel pipes into the two M10 holes.

**Step4:** Install the inverter/charger and determine the installation position of the M10 hole (located at the bottom of the inverter/charge).

**Step5:** Remove the inverter/charger and drill an M10 hole according to the position determined in **step4**.

**Step6:** Insert the screw of the M8 bolt and the steel pipe into the M10 hole.

**Step7:** Install the inverter/charger and secure the nuts with a sleeve.

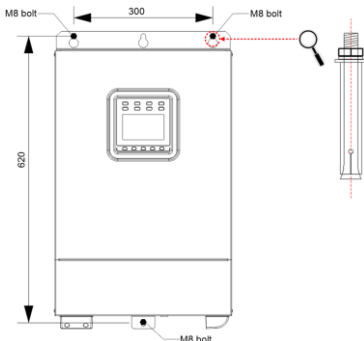


## 2.5 Wiring

### 1) Remove the terminal cover


Remove covers of the AC output /AC input/utility input terminal with a screwdriver, as shown below:



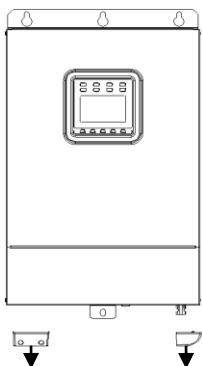



## 2) Remove the inverter/charger cover

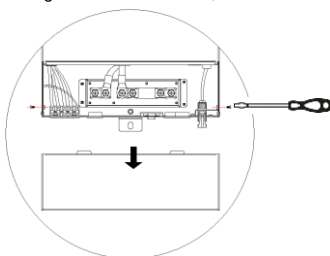Remove the screws beside the inverter/charger with a screwdriver, as shown below:



## 3) Connect the battery

|  |   |
|--|---|
| <br><b>WARNING</b>  | <p>A circuit breaker must be installed on the battery side. For selection, please refer to chapter "<a href="#">2.2.2 Prepare modules</a>".</p>   |
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>When wiring the battery, please do not close the circuit breaker and ensure that the leads of "+" and "-" poles are connected correctly.</li> <li>A circuit breaker current is 1.25 to 2 times the rated current must be installed on the battery side away from the battery not longer than 200mm.</li> </ul> |


- Connection sequence of the battery**

**Step1:** Remove the screw of the inverter/charger positive terminal with a sleeve, the torque of which is 3.5N.M.

**Step2:** Connect the ring terminal of the battery connection wire to the inverter/charger's positive terminal.

**Step3:** Install the screw and secure it with the sleeve.

**Step4:** Connect and secure the negative terminal of the inverter/charger following the step1~step3.

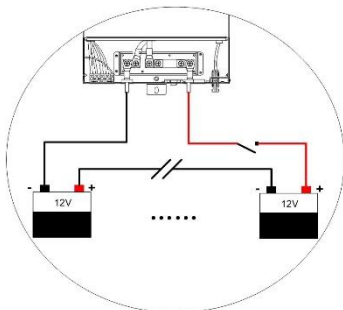


#### 4) Connect the AC load




**WARNING**



- Risk of electric shock! When wiring the AC load, please do not close the circuit breaker and ensure that the poles leads are connected correctly.
- If utility input exists, the inverter/charger must be connected to the ground terminal.
- We do not assume any responsibility for the unnecessary danger when the ground terminal is not connected correctly.
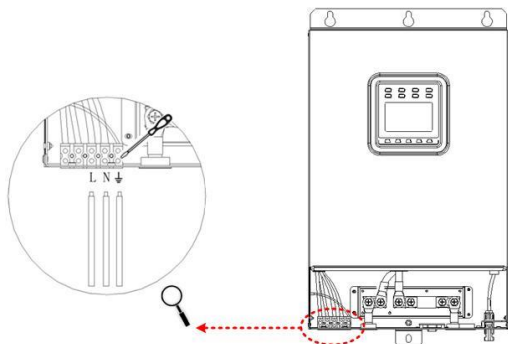
| Silk-screen | Abbreviation | Name         | Color           |
|-------------|--------------|--------------|-----------------|
| L           | LINE         | Live wire    | Brown/black     |
| N           | Neutral      | Neutral line | Blue            |
|             | —            | Ground line  | Yellowish-green |

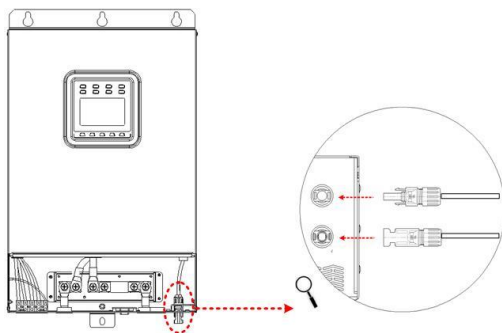


### 5) Connect the PV modules




|   |  |
|---|--|
| <br><b>WARNING</b> | <p>Risk of electric shock! When wiring the PV modules, please do not close the circuit breaker and ensure that the leads of "+" and "-" poles are connected correctly.</p> |
| <br><b>CAUTION</b> | <p>If the inverter/charger is used in an area with frequent lightning strikes, installing an external surge arrester is recommended.</p>                                   |

### 6) Connect the utility input

|   |  |
|---|--|
| <br><b>WARNING</b> | <ul style="list-style-type: none"> <li>• Risk of electric shock! When wiring the utility input, please do not close the circuit breaker and ensure that the poles' leads are connected correctly.</li> <li>• When the utility is connected, the PV and battery terminals are prohibited from grounding, while the UPower-Hi shell must be reliably grounded. It can effectively shield the external electromagnetic interference and prevent the shell from electric shock to the human body.</li> </ul> |
|---|--|

| Silk-screen | Abbreviation | Name         | Color       |
|-------------|--------------|--------------|-------------|
| L           | LINE         | Live wire    | Brown/black |
| N           | Neutral      | Neutral line | Blue        |

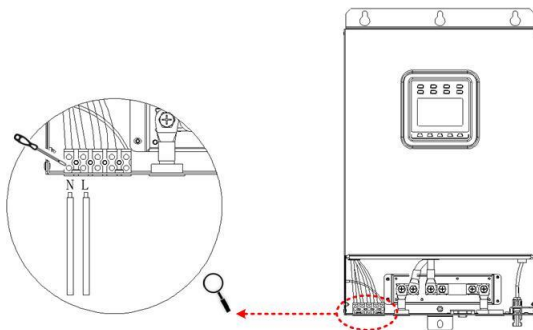

## 7) Connect accessories

### A. RBVS interface

#### ◇ Function:

This interface can be connected to the battery voltage sampling wire to detect the battery voltage accurately. The sampling distance is no longer than 20 meters.

#### ◇ Needs:

3.81-2P terminal 1 pcs

Positive and negative(red+, black-) wire 1 pcs each (determine the length and wire size of the connecting wire according to the customer's actual needs.)


#### ◇ Making the RBVS wire:

One end of the positive and negative wire is connected to the 3.81-2P terminal. The other end is connected to the positive and negative terminals of the battery.



**CAUTION**


When connecting the RBVS wire, ensure the positive and negative poles (red +, black -).

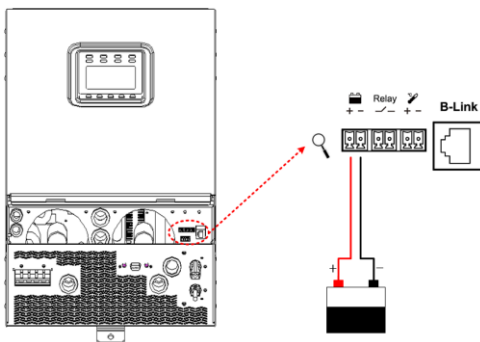

### B. Dry contact interface

#### ◇ Function:

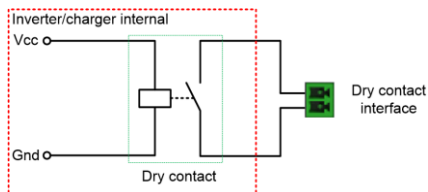

The dry contact interface can turn on/off the generator and is connected parallel with the generator's switch.



◇ **Working principle:**

When the battery voltage reaches the dry contact ON voltage(DON), the dry contact is connected. Its coil is energized. The dry contact can drive loads of no more than 125VAC /1A, 30VDC/1A. According to different battery types of the inverter charger, the default values of the dry contact ON(DON) voltage and the dry contact OFF(DOF) voltage are different. Please refer to the chapter [3.5 Settings](#) > item **19 DON** and item **20 DOF** for details.


**C. Connect the RTS interface**

| Category           | Name                        | Model            | Picture   |
|--------------------|-----------------------------|------------------|---|
| Included accessory | External temperature sensor | RT-MF58R47K3.81A |  |
| Optional accessory | Remote Temperature Sensor   | RTS300R47K3.81A  |  |




**CAUTION**

Suppose the remote temperature sensor is not connected to the controller. The default setting for battery charging or discharging temperature is 25 °C without temperature compensation.

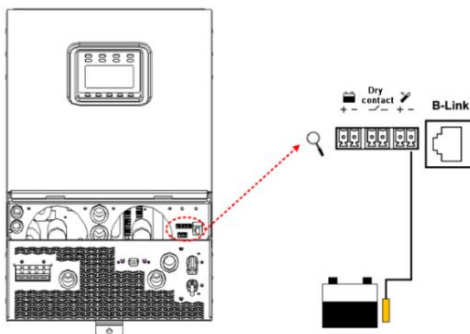

**D. BMS-Link connection port (RJ45)**

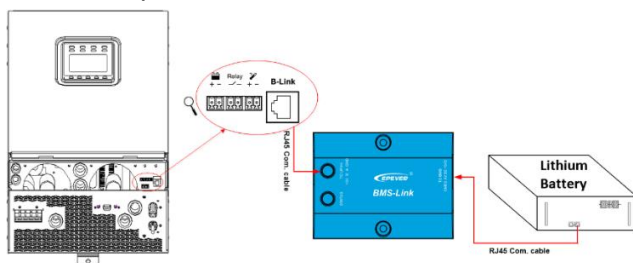


◇ **Function:**

Through a BMS-Link converter, different lithium battery manufacturers' BMS protocols can be converted into our company's standard BMS protocol. In addition, it realizes the communication between the inverter/charger and the BMS.


◇ **Needs:**

**(Included)**CC-RS485-RS485-350mm(Connect the inverter/charger to the BMS-Link converter)

**(Optional)**RS485 communication cable(Connect the lithium battery to the BMS-Link converter. Adjust the cable according to the lithium battery's BMS line sequence)

|   |   |
|---|---|
| <br><b>CAUTION</b> | This connection port is only used to connect the BMS-Link converter. For details about the BMS-Link, please refer to <i>BMS-LINK Manual</i> . |
|---|---|

**E. RS485 interface (DB9 connector)**

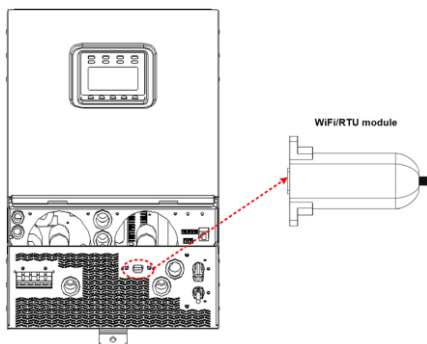


◇ **Function:**

For base UPower-Hi products, its DB9 interface provides 0.2A/5V power supply and can be connected to a WiFi module or PC.

For RTU-type UPower-Hi products, its DB9 interface provides 0.2A/12V power supply and can be connected to RTU, WiFi module, or PC.

8) Install the cover and secure the screws.

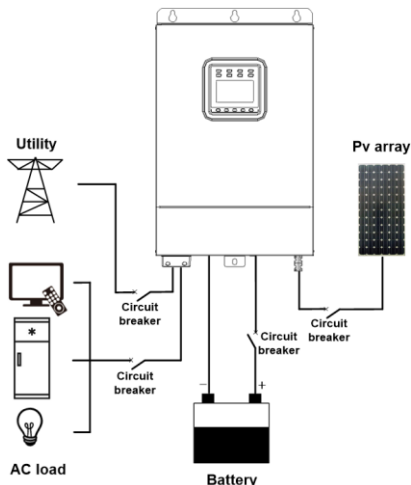

## 2.6 Operating the inverter/charger

- 1) Close the circuit breaker of the battery side.
- 2) Turn the rocker switch on the side of the inverter/charger to the ON state. The inverter/charger generally works when the indicator is ON solid.



**WARNING**

Ensure that the battery connection is correct and the battery circuit breaker is turned on first. And then, close the PV array and utility circuit breakers after the inverter/charger running normally. Again, we won't assume any responsibility for not following the operation.

- 3) Close the circuit breaker of the PV array.
- 4) Close the circuit breaker of the utility input.
- 5) After the AC output is normal, turn on the AC loads one by one. The inverter/charger typically works as per the set mode. Do not turn on all the loads simultaneously to avoid protection due to a large transient impulse current.











**CAUTION**



- When supplying power for different AC loads, it is recommended to turn on the load with a large impulse current. And then turn on the load with a smaller impulse current after the load output is stable.
- If the inverter/charger is not operating correctly or the LCD or the indicator shows an abnormality, please refer to "Troubleshooting" or contact us.

## 3 Interface




### 3.1 Indicator

| Indicator  | Color | Status                  | Definition   |
|--|-------|-------------------------|--|
|             | Green | Off                     | No utility input                                       |
|  |       | On solid                | Utility connected, but not charging                    |
|  |       | Slowly flashing (0.5Hz) | Utility is charging                                    |
|  |       | Fast flashing (2.5Hz)   | Utility charging fault                                 |
|             | Green | Off                     | No PV input  |
|  |       | On solid                | PV connected, but not charging                         |
|  |       | Slowly flashing (0.5Hz) | PV is charging   |
|  |       | Fast flashing (2.5Hz)   | PV charging fault                                      |
|             | Green | Off                     | Inverter is off  |
|  |       | On solid                | Inverter standby or bypass                             |
|  |       | Slowly flashing (0.5Hz) | Inverter supplies power                                |
|  |       | Fast flashing (2.5Hz)   | Inverter fault   |
|             | Green | Off                     | Load off   |
|  |       | On solid                | Load on  |
| <br>Relay   | Green | Off                     | Relay disconnected                                     |
|  |       | On solid                | Relay connected  |
| <br>Remote  | Green | On solid                | Remote control load on by cloud platform or phone APP  |
|  |       | Slowly flashing (0.5Hz) | Remote control load off by cloud platform or phone APP |
|  |       | Off                     | No remote control                                      |
| <br>Bypass | Green | Off                     | Inverter supplies power                                |
|  |       | Slowly flashing (0.5Hz) | Utility supplies power                                 |
| <br>Fault | Red   | Off                     | Device normal  |
|  |       | On solid                | Device fault   |


### 3.2 Button

| Button   | Operation         | Instruction                |
|--|-------------------|----------------------------|
| <br> | Click(<50ms)      | Exit the current interface |
|  | Long press(>2.5s) | Clear the faults           |







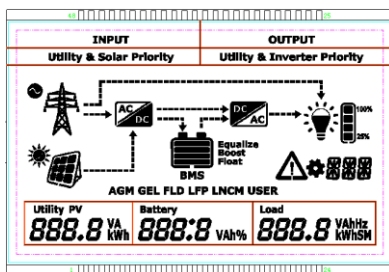










|   |                             |   |
|---|-----------------------------|---|
|  | <p>Click(&lt;50ms)</p>      | <ol style="list-style-type: none"> <li>1. Browse/Setting Interface: "UP" for page up; "Down" for page down</li> <li>2. Modify parameter values: "UP" to increase the value; "DOWN" to decrease the value</li> </ol> |
|  | <p>Click(&lt;50ms)</p>      | <ol style="list-style-type: none"> <li>1. Switch the page on the real-time monitoring interface</li> <li>2. Confirm settings</li> </ol>   |
|   | <p>Long press(&gt;2.5s)</p> | <ol style="list-style-type: none"> <li>1. Switch between "Real-time monitoring interface," "Settings interface," "Parameters interface."</li> <li>2. Confirm settings</li> </ol>                                    |
|  | <p>Long press(&gt;2.5s)</p> | <p>Switch on/off the AC output</p>  |

### 3.3 LCD




#### • Symbol definition

| Symbol  | Definition   | Symbol  | Definition  |
|---|--|---|---|
|  | Utility connected and charging                                 |  | PV connected and charging                                     |
|  | 1. Utility disconnected<br>2. Utility connected, but no charge |  | 1. PV disconnected<br>2. PV connected, but the voltage is low |
|  | Load ON  |  | Load OFF  |
|  | Battery capacity <sup>Ⓞ</sup> lower than 15% <sup>Ⓞ</sup>      |  | Battery capacity <sup>Ⓞ</sup> 15%~40%                         |


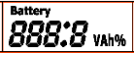
|   |   |   |  |
|---|---|---|--|
|   | Battery capacity <sup>Ⓞ</sup><br>40%~60%  |   | Battery capacity <sup>Ⓞ</sup> 60%~80%  |
|  | Battery capacity <sup>Ⓞ</sup><br>80%~100% | <b>BMS</b>  | Symbol ON: Battery with BMS<br>Symbol OFF: Battery without BMS<br><b>Attention: Please follow the BMS control logic to set parameters when the battery with BMS.</b> |
|  | Load power<br>8~25%(one cell)             |  | Load power<br>25~50%(two cells)  |
|  | Load power<br>50~75%(three cells)         |  | Load power<br>75~100%(four cells)  |


① After the inverter/charger is powered on for the first time, the battery capacity displayed on the LCD may be inaccurate. To display the available battery capacity accurately, the below process of self-calibration and self-learning is necessary.

- When the battery voltage reaches the low voltage disconnect voltage or reaches the float charging voltage, the inverter/charger calibrates the battery capacity for the first time.
- When the battery goes from the over-discharged state to the fully-charged state, the inverter/charger calibrates the battery capacity again.

|   |   |
|---|---|
| <br><b>CAUTION</b> | When the connected lithium battery (with BMS) is equipped with a battery capacity display, the lithium battery capacity will be displayed as per the BMS. |
|---|---|

• Interface Definition

| Item  | Settings | Content  |
|---|----------|--|
| <b>INPUT</b><br><u>Solar Priority</u>   | INPUT    | Solar priority<br>Utility & solar<br>Solar   |
| <b>OUTPUT</b><br><u>Inverter Priority</u>   | OUTPUT   | Utility priority<br>Inverter priority  |
|  | Load     | AC output voltage<br>AC output current<br>AC output power<br>AC output frequency                               |
|  | Battery  | Battery voltage<br>Max. charging current(PV charging current+ utility charging current)<br>Battery temperature |
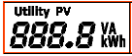
|   |              |   |
|---|--------------|---|
|   |              | Battery SOC   |
|  | PV           | PV input voltage<br>PV input current<br>PV input power<br>PV input capacity                                       |
|   | Utility      | Utility input voltage<br>Utility charging input current<br>Utility charging input power<br>Utility input capacity |
| <b>AGM GEL FLD LFP LNCM USER</b>  | Battery Type | AGM<br>GEL<br>FLD<br>LFP8/LFP15/LFP16<br>LNCM7/LNCM14<br>AGM/GEL/FLD/LFP/LNCM+USER                                |

### 3.4 Operating mode

#### 3.4.1 Abbreviation


| Abbreviation | Illustration                   |
|--------------|--------------------------------|
| $P_{PV}$     | PV power                       |
| $P_{LOAD}$   | Load power                     |
| $V_{BAT}$    | Battery voltage                |
| LVR          | Low voltage reconnect voltage  |
| LVD          | Low voltage disconnect voltage |
| AOF          | Auxiliary module OFF voltage   |
| AON          | Auxiliary module ON voltage    |
| MCC          | Max charging current           |

#### 3.4.2 Battery mode




|       |                 |  |
|-------|-----------------|--|
| INPUT | Solar           | Only solar energy can charge the battery, no matter utility is available or not.   |
|       | Solar Priority  | When PV power is sufficient, PV charges the battery. When the battery voltage is lower than AON, the utility charges the battery as a supplement; when the battery voltage is higher than AOF, the utility stops charging the battery.<br><br><b>Note: AOF and AON setting refers to Item 17/18 on the Advanced interface for engineers.</b> |
|       | Utility & Solar | PV and utility charge the battery at the same time. When PV power is sufficient, the PV power is the primary source.   |

|        |                   |   |
|--------|-------------------|---|
|        |                   | <b>Note: After selecting this working mode, the output mode is not controlled freely, though it can be set. Details refer to the below instructions.</b>  |
| OUTPUT | Inverter Priority | PV power is sufficient (namely, extra energy exists except charging the battery), PV supplies the load as a priority. When PV power is insufficient, the battery supplies the load as a supplement. When the battery voltage is lower than LVD, the utility supplies the load as a supplement.<br><br><b>Note: LVD and LVR settings refer to Item 7 on the Standard interface for common users.</b> |
|        | Utility Priority  | Utility supplies the load as a priority.<br><br>When the utility is abnormal, the PV supplies the load as a supplement. When PV power is insufficient, the battery supplies the load as a supplement.   |




**Scenario A: Both PV and utility are not available.**
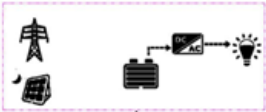
|  |  |   |
|--|--|---|
| (A)<br>PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> | <b>Regardless of the input and output sources, the working mode is as follows.</b> |   |
|  |   | Before the battery voltage drops to the LVD point, the battery supplies the load. |

**Scenario B: PV is available, but the utility is not available.**
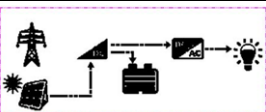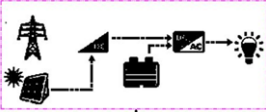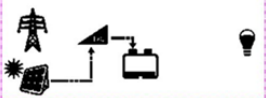
|  |   |   |
|--|---|---|
| (B)<br>PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> | <b>Regardless of the input and output sources, the working mode is as follows.</b>  |   |
|  |   | ① When $P_{PV} > P_{Load}$ , PV charges the battery and supplies extra power to the load.                               |
|  |  | ② When $P_{PV} \leq P_{Load}$ , PV stops charging the battery. Instead, it supplies the load together with the battery. |
|  |  | ③ When $V_{Battery} \leq V_{LVD}$ , only PV charges the battery.  |

Scenario C: Both PV and utility are available.
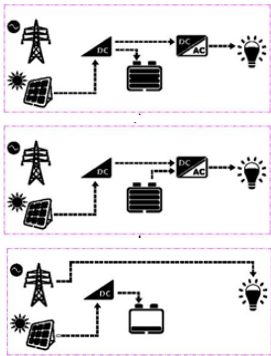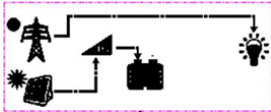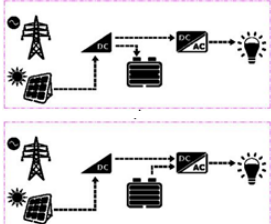
|   |  |   |
|---|--|---|
| <p>(C-1)</p> <p>PV <input checked="" type="checkbox"/></p> <p>Utility <input checked="" type="checkbox"/></p> | <p>Input: <u>Solar only</u></p>       | <p>Output: <u>Inverter Priority</u></p> <ol style="list-style-type: none"> <li>1 When <math>P_{PV} &gt; P_{Load}</math>, PV charges the battery and supplies extra power to the load.</li> <li>2 When <math>P_{PV} \leq P_{Load}</math>, PV stops charging the battery. Instead, it supplies the load together with the battery.</li> <li>3 When <math>V_{Battery} \leq V_{LVD}</math>, the utility supplies the load, and PV charges the battery.</li> </ol> |
| <p>(C-2)</p> <p>PV <input checked="" type="checkbox"/></p> <p>Utility <input checked="" type="checkbox"/></p> | <p>Input: <u>Solar only</u></p>       | <p>Output: <u>Utility Priority</u></p> <p>Utility supplies the load, and PV charges the battery.</p>  |
| <p>(C-3)</p> <p>PV <input checked="" type="checkbox"/></p> <p>Utility <input checked="" type="checkbox"/></p> | <p>Input: <u>Solar Priority</u></p>  | <p>Output: <u>Inverter Priority</u></p> <ol style="list-style-type: none"> <li>1 When <math>P_{PV} &gt; P_{Load}</math>, PV charges the battery and supplies extra power to the load.</li> <li>2 When <math>P_{PV} \leq P_{Load}</math>, PV stops charging the battery. Instead, it supplies the load together with the battery.</li> </ol>   |


|  |   |
|--|---|
|  | <p><b>2</b> When the battery voltage goes lower than or equal to AON and has not been charged to AOF, the below interfaces show different conditions.</p> <div data-bbox="248 182 528 298"> <p>When <math>P_{PV} \leq MCC * V_{BAT}</math>, the utility supplies the load alone and charges the battery together with the PV.</p> </div> <div data-bbox="248 320 528 436"> <p>When <math>P_{PV} &gt; MCC * V_{BAT}</math>, PV charges the battery alone and supplies the load together with the utility.</p> </div> |
|--|---|

|   |   |  |
|---|---|--|
| <p>(C-4)</p> <p>PV <input checked="" type="checkbox"/></p> <p>Utility <input checked="" type="checkbox"/></p> | <p>Input: <u>Solar Priority</u></p>   | <p>Output: <u>Utility Priority</u></p> |
|   | <div data-bbox="248 524 528 640"> <p><b>1</b> PV charges the battery, and the utility supplies the load.</p> </div> <p><b>2</b> When the battery voltage goes lower than or equal to AON and has not been charged to AOF, the below interfaces show different conditions.</p> <div data-bbox="248 735 528 851"> <p>When <math>P_{PV} \leq MCC * V_{BAT}</math>, the utility supplies the load alone and charges the battery together with the PV.</p> </div> <div data-bbox="248 873 528 990"> <p>When <math>P_{PV} &gt; MCC * V_{BAT}</math>, the PV charges the battery alone and supplies the load together with the utility.</p> </div> |  |




|   |  |                                       |
|---|--|---------------------------------------|
| <p>(C-5)</p> <p>PV <input checked="" type="checkbox"/></p> <p>Utility <input checked="" type="checkbox"/></p> | <p>Input: <u>Utility &amp; Solar</u></p>   | <p>Output: <u>Un-programmable</u></p> |
|   | <div data-bbox="248 1084 528 1201"> <p><b>1</b> When <math>P_{PV} \leq MCC * V_{BAT}</math>, the utility supplies the load alone and charges the battery together with the PV.</p> </div> <p><b>2</b> When <math>P_{PV} &gt; MCC * V_{BAT}</math>, the PV charges the battery alone and supplies the load together with the utility.</p> |                                       |

Scenario D: PV power is not available, and the utility is available.


|  |                              |                                  |
|--|------------------------------|----------------------------------|
| (D-1)<br>PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> | Input: <u>Solar only</u>     | Output: <u>Inverter Priority</u> |
|  |                              |                                  |
| (D-2)<br>PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> | Input: <u>Solar only</u>     | Output: <u>Utility Priority</u>  |
|  |                              |                                  |
| (D-3)<br>PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> | Input: <u>Solar Priority</u> | Output: <u>Inverter Priority</u> |
|  |                              |                                  |
| (D-4)<br>PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> | Input: <u>Solar Priority</u> | Output: <u>Utility Priority</u>  |
|  |                              |                                  |
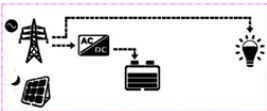
|  |   |                                |
|--|---|--------------------------------|
| (D-5)<br>PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> | Input: <b>Utility &amp; Solar</b>   | Output: <b>Un-programmable</b> |
|  |  |                                |
| Utility supplies the load and charges the battery.   |   |                                |

### 3.4.3 No battery mode
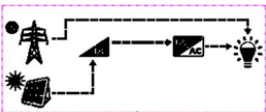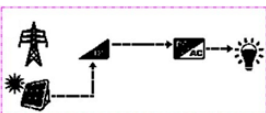
|   |   |   |
|---|---|---|
| PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> |  | PV supplies the load together with the utility. |
| PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> |  | The PV supplies the load alone.                 |
| PV <input checked="" type="checkbox"/><br>Utility <input checked="" type="checkbox"/> |  | The utility supplies the load alone.            |

### 3.5 Settings

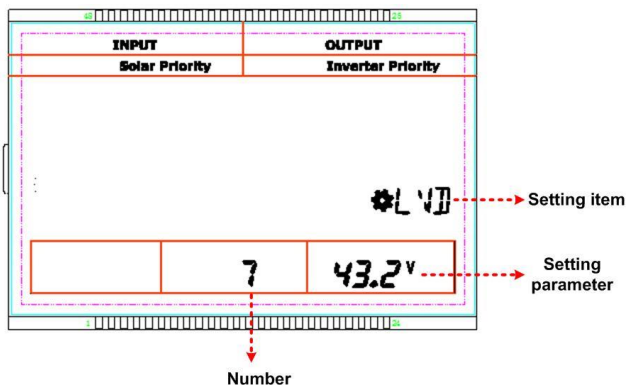

#### 1) Standard interface for common users

##### Operations:

**Step1:** In the real-time interface, long press the SET/ENTER button to enter the standard interface.



**Step2:** Press the UP/DOWN button to select the setting item.

**Step3:** Long press the SET/ENTER button to enter the parameter setting interface.

**Step4:** Press the UP/DOWN button to change the parameters.



**Step5:** Press the SET/ENTER button to confirm.

**Step6:** Press the ESC button to exit.

**Setting items:**

| NO. | Instruction                     | Setting |  |
|-----|---------------------------------|---------|--|
| 0   | No battery mode or battery mode |         | Battery mode(Default)  |
|     |                                 |         | No battery mode  |
| 1   | Battery type                    |         | AGM(Default)   |
|     |                                 |         | GEL  |
|     |                                 |         | FLD  |
|     |                                 |         | LFP8   |
|     |                                 |         | LFP15  |
|     |                                 |         | LFP16  |
|     |                                 |         | LNCM7  |
|     |                                 |         | LNCM14   |
|     |                                 |         | AGM/GEL/FLD/LFP/LNCM+USER<br>Important: USER battery type can be combined with other battery types and set corresponding parameters. |

|   |                                |  |  |
|---|--------------------------------|--|--|
| 2 | Charge mode                    | INPUT<br>Solar Priority<br>*CSP<br>2                       | Solar priority(Default)  |
|   |                                | INPUT<br>Utility & Solar<br>*CSP<br>2                      | Utility & solar  |
|   |                                | INPUT<br>Solar<br>*CSP<br>2                                | Solar  |
| 3 | Output mode                    | OUTPUT<br>Utility Priority<br>*OSP<br>3                    | Utility priority(Default)  |
|   |                                | OUTPUT<br>Inverter Priority<br>*OSP<br>3                   | Inverter priority  |
| 4 | Temperature unit               | *TMU<br>4 C  | °C(Default)  |
|   |                                | *TMU<br>4 F  | °F   |
| 5 | LCD backlight time             | *ELT<br>5 30.0 s   | 30S(Default)   |
|   |                                | *ELT<br>5 60.0 s   | 60S  |
|   |                                | *ELT<br>5 100.0 s  | 100S(on solid)   |
| 6 | Buzzer alarm switch            | *B.AS<br>6 ON  | ON(Default)  |
|   |                                | *B.AS<br>6 OFF   | OFF  |
| 7 | Low voltage disconnect voltage | *LV<br>AGH<br>7 21.6V                                      | User define for the 24V system:<br>21.6~32.0V<br>Step size: long press for 1V,<br>short press for 0.1V |
|   |                                | AGM(Default)/GEL/FLD: 21.6V<br>LFP8: 25.5V<br>LCNM7: 25.5V |  |
|   |                                | *LV<br>AGH<br>7 43.2V                                      | User define for the 48V system:<br>43.2~64.0V  |

|   |                                     |  |  |
|---|-------------------------------------|--|--|
|   |                                     | AGM(Default)/GEL/FLD: 43.2V<br>LFP15: 47.8V<br>LFP16: 51.0V<br>LCNM14: 51.0V                               | Step size: long press for 1V,<br>short press for 0.1V  |
| 8 | Low voltage<br>reconnect<br>voltage | AGM  LFP<br><b>8 25.0</b> | User define for the 24V system:<br>21.6~32.0V<br>Step size: long press for 1V,<br>short press for 0.1V |
|   |                                     | AGM(Default)/GEL/FLD: 25.0V<br>LFP8: 26.0V<br>LCNM7: 26.0V   |  |
|   |                                     | AGM  LFP<br><b>8 50.0</b> | User define for the 48V system:<br>43.2~64.0V<br>Step size: long press for 1V,<br>short press for 0.1V |
|   |                                     | AGM(Default)/GEL/FLD: 50.0V<br>LFP15: 48.8V<br>LFP16: 52.0V<br>LCNM14: 52.0V                               |  |



**CAUTION**

When the output mode is inverter priority, and the battery voltage is lower than the low voltage disconnect voltage (configurable), the utility supplies the load.

## 2) Advanced interface for engineers

### Operations:

**Step1:** In the real-time interface, long press the UP+DOWN button to enter the advanced interface.

**Step2:** Press the UP/DOWN button to select the setting item.



 
 
**Step3:** Long press the SET/ENTER button to enter the parameter configuring the interface.

**Step4:** Press the UP/DOWN button to modify the parameters.

 
 

 


**Step5:** Press the SET/ENTER button to confirm.








**Step6:** Press the ESC button to exit.

### Setting items:

| NO. | Instruction            | Setting   |               |
|-----|------------------------|---|---------------|
| 9   | Boost<br>charging time | AGM <br><b>9 30</b>  | 30M           |
|     |                        | AGM <br><b>9 60</b>  | 60M           |
|     |                        | AGM <br><b>9 120</b> | 120M(Default) |
|     |                        | AGM <br><b>9 180</b> | 180M          |

|    |                           |  |  |
|----|---------------------------|--|--|
| 10 | Equalize charging time    | AGM *ECT<br>10 30 M  | 30M  |
|    |                           | AGM *ECT<br>10 60 M  | 60M  |
|    |                           | AGM *ECT<br>10 120 M   | 120M(Default)  |
|    |                           | AGM *ECT<br>10 180 M   | 180M   |
| 11 | Equalize charging voltage | AGM *ECT<br>11 29.2V   | It cannot be set, which changes depending on the boost charging voltage.                         |
|    |                           | AGM(Default): 29.2V<br>GEL: —<br>FLD: 29.6V<br>LFP8: 28.2V<br>LCNM7:<br>28.9V                    |  |
|    |                           | AGM *ECT<br>11 58.4V   |  |
|    |                           | AGM(Default): 58.4V<br>GEL: --<br>FLD: 59.2V<br>LFP15: 53.0V<br>LFP16: 56.5V<br>LCNM14: 57.8V    |  |
| 12 | Boost charging voltage    | AGM *ECT<br>12 28.8V   | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                           | AGM(Default): 28.8V<br>GEL: 28.4V<br>FLD: 29.2V<br>LFP8: 28.2V<br>LCNM7:<br>28.9V                |  |
|    |                           | AGM *ECT<br>12 57.6V   | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                           | AGM(Default): 57.6V<br>GEL: 56.8V<br>FLD: 58.4V<br>LFP15: 53.0V<br>LFP16: 56.5V<br>LCNM14: 57.8V |  |


 

 
 
 
|    |                                       |  |  |
|----|---------------------------------------|--|--|
| 13 | Boost voltage<br>reconnect<br>voltage | <small>AGM</small><br><br><b>13 26.4V</b>    | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                       | AGM(Default)/GEL/FLD:<br>26.4V<br>LFP8: 26.4V<br>LCNM7:<br>26.8V   |  |
|    |                                       | <small>AGM</small><br><br><b>13 52.8V</b>   |  |
|    |                                       | AGM(Default)/GEL/FLD:<br>52.8V<br>LFP15: 49.5V<br>LFP16: 52.8V<br>LCNM14: 53.6V  |  |
| 14 | Float charging<br>voltage             | <small>AGM</small><br><br><b>14 27.6V</b>   | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                       | AGM(Default)/GEL/FLD:<br>27.6V<br>LFP8: 27.2V<br>LCNM7:<br>28.2V   |  |
|    |                                       | <small>AGM</small><br><br><b>14 55.2V</b>   |  |
|    |                                       | AGM(Default)/GEL/FLD:<br>55.2V<br>LFP15: 51.0V<br>LFP16: 54.4V<br>LCNM14: 56.4V  |  |
| 15 | Over voltage<br>reconnect<br>voltage  | <small>AGM</small><br><br><b>15 30.0V</b>  | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                       | AGM(Default)/GEL/FLD:<br>30.0V<br>LFP8: 28.5V<br>LCNM7:<br>29.0V   |  |
|    |                                       | <small>AGM</small><br><br><b>15 60.0V</b> |  |
|    |                                       | AGM(Default)/GEL/FLD:<br>60.0V   |  |

|    |                                 |   |  |
|----|---------------------------------|---|--|
|    |                                 | LFP15: 53.5V<br>LFP16: 57.0V<br>LCNM14: 58.0V   |  |
| 16 | Over voltage disconnect voltage | AGM <br>15 32.0V   | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V   |
|    |                                 | AGM(Default)/GEL/FLD:<br>32.0V<br>LFP8: 29.0V<br>LCNM7:<br>30.0V                                    |  |
|    |                                 | AGM <br>15 64.0V   | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V   |
|    |                                 | AGM(Default)/GEL/FLD:<br>64.0V<br>LFP15: 54.5V<br>LFP16: 58.0V<br>LCNM14: 60.0V                     |  |
| 17 | Auxiliary module OFF voltage    | AGM <br>17 26.6V   | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V<br><b>NOTE: The difference between AOF and AON should be larger than or equal to 0.5V, or else the setting cannot be saved.</b> |
|    |                                 | AGM <br>17 53.2V   | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V<br><b>NOTE: The difference between AOF and AON should be larger than or equal to 1V, or else the setting cannot be saved.</b>   |
| 18 | Auxiliary module ON voltage     | AGM <br>18 24.0V  | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V<br><b>NOTE: The difference between AOF and AON should be larger than or equal to 0.5V, or else the setting cannot be saved.</b> |
|    |                                 | AGM <br>18 48.0V | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V<br><b>NOTE: The difference between AOF and AON should be larger than or equal to 1V, or else the setting cannot be saved.</b>   |
| 19 | Dry contact ON voltage          | AGM <br>19 22.2V | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V   |


|    |                                       |  |   |
|----|---------------------------------------|--|---|
|    |                                       | AGH $\star$ DDH<br><b>19 44.4<sup>v</sup></b>  | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V  |
| 20 | Dry contact<br>OFF voltage            | AGH $\star$ DDF<br><b>20 24.0<sup>v</sup></b>  | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V  |
|    |                                       | AGH $\star$ DDF<br><b>20 48.0<sup>v</sup></b>  | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V  |
| 21 | Maximum<br>charging<br>current        | AGH $\star$ MCC<br><b>21 80.0<sup>A</sup></b>  | UP3000-HM5041/UP3000-HM5042:<br>50A( <b>Default</b> ) User define: 5~50A<br>UP2000-HM6021/UP2000-HM6022:<br>60A( <b>Default</b> ) User define: 5~60A<br>UP3000-HM10021/UP3000-HM10022:<br>100A( <b>Default</b> ) User define: 5~100A<br>UP3000-HM8041/JP5000-HM8042: 80A ( <b>默认</b> )<br>User define: 5~80A<br>Step size: long press for 10A, short press for 1A |
| 22 | Max. utility<br>charging<br>current   | AGH $\star$ MUC<br><b>22 60.0<sup>A</sup></b>  | UP2000-HM6021/JP2000-HM6022/JP5000-HM<br>8042: 60A( <b>Default</b> ) User define: 2~60A<br>UP3000-HM5041/JP3000-HM5042/UP3000-HM<br>8041: 40A( <b>Default</b> ) User define: 2~40A<br>UP3000-HM10021/UP3000-HM10022:<br>80A( <b>Default</b> ) User define: 2~80A<br>Step size: long press for 10A, short press for 1A   |
| 24 | Clear fault                           | AGH $\star$ CF1<br><b>24 OFF</b>               | OFF( <b>Default</b> )   |
|    |                                       | AGH $\star$ CF1<br><b>24 ON</b>                | ON  |
| 25 | Clear the PV<br>accumulated<br>energy | AGH $\star$ QCL<br><b>25 OFF</b>               | OFF( <b>Default</b> )   |
|    |                                       | AGH $\star$ QCL<br><b>25 ON</b>                | ON  |
| 26 | Total battery<br>capacity             | AGH $\star$ TBC<br><b>26 1000<sup>Ah</sup></b> | 100Ah( <b>Default</b> )<br>User define:1~4000Ah<br>Step size:<br>Below 200Ah: long press for 10A, short press for<br>1A<br>Above 200Ah: long press for 50A, short press for<br>5A<br><b>CAUTION: To accurately display the battery capacity,<br/>         the customer needs to set this item according to the</b>  |

|    |   |                               |   |
|----|---|-------------------------------|---|
|    |   |                               | <b>actual battery capacity.</b>   |
| 27 | Temperature compensate coefficient  | AGM $\star TCC$<br>27 3       | 3(Default)<br>0(lithium battery)<br>0-9(Non-lithium battery)<br>Step size is 1              |
| 28 | Charge low temperature limit  | AGM $\star TLC$<br>28 0C      | 0°C(Default)<br>User define:-40~0°C<br>Step size: 5°C                                       |
| 29 | Discharge low temperature limit   | AGM $\star TLL$<br>29 0C      | 0°C(Default)<br>User define:-40~0°C<br>Step size: 5°C                                       |
| 30 | Output voltage level  | AGM $\star VPT$<br>30 110.0V  | 110VAC(Default for devices of 100V output voltage)  |
|    |   | AGM $\star VPT$<br>30 120.0V  | 120VAC  |
|    |   | AGM $\star VPT$<br>30 220.0V  | 220VAC(Default for devices of 200V output voltage)  |
|    |   | AGM $\star VPT$<br>30 230.0V  | 230VAC  |
| 31 | Output frequency (If detecting the utility input, the output frequency is switched to the utility frequency automatically.) | AGM $\star FRE$<br>31 50.0 Hz | 50Hz(Default)   |
|    |   | AGM $\star FRE$<br>31 60.0 Hz | 60Hz  |
| 32 | Lithium battery protection enable(stop charging and discharging the lithium battery when the temperature is                 | AGM $\star LEN$<br>32 OFF     | OFF(Default)  |
|    |   | AGM $\star LEN$<br>32 ON      | ON<br>(Note: After connecting to the BMS successfully, it will be ON status automatically.) |



|    |                                 |  |  |
|----|---------------------------------|--|--|
|    | too low)                        |  |  |
| 33 | Charge voltage limit voltage    | <small>AGM</small><br> <b>33 30.0<sup>v</sup></b>   | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                 | AGM(Default)/GEL/FLD:<br>30.0V<br>LFP8: 28.5V<br>LCNM7:<br>29.4V   |  |
|    |                                 | <small>AGM</small><br> <b>33 60.0<sup>v</sup></b>   | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                 | AGM(Default)/GEL/FLD:<br>60.0V<br>LFP15: 53.5V<br>LFP16: 57.0V<br>LCNM14: 58.8V  |  |
| 35 | Under voltage reconnect voltage | <small>AGM</small><br> <b>35 24.4<sup>v</sup></b>   | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                 | AGM(Default)/GEL/FLD:<br>24.4V<br>LFP8: 26.2V<br>LCNM7:<br>26.7V   |  |
|    |                                 | <small>AGM</small><br> <b>35 48.8<sup>v</sup></b>   | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                 | AGM(Default)/GEL/FLD:<br>48.8V<br>LFP15: 49.2V<br>LFP16: 52.4V<br>LCNM14: 53.4V  |  |
| 36 | Under voltage warning voltage   | <small>AGM</small><br> <b>36 24.0<sup>v</sup></b> | User define for the 24V system: 21.6~32.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                 | AGM(Default)/GEL/FLD:<br>24.0V<br>LFP8: 25.7V<br>LCNM7:<br>26.2V   |  |
|    |                                 | <small>AGM</small><br> <b>36 48.0<sup>v</sup></b> | User define for the 48V system: 43.2~64.0V<br>Step size: long press for 1V, short press for 0.1V |
|    |                                 | AGM(Default)/GEL/FLD:  |  |

|    |  |  |  |
|----|--|--|--|
|    |  | 48.0V<br>LFP15: 48.2V<br>LFP16: 51.4V<br>LCNM14: 52.4V |  |
| 37 | Utility over voltage disconnect voltage                      | AGM *UP11<br>3 7 132.0'                                | 132.0V(Default for the 110V system)<br>User define: 110VAC~140VAC<br>Step size: long press for 10V, short press for 1V   |
|    |  | AGM *UP12<br>3 7 264.0'                                | 264.0V(Default for the 220V system)<br>User define: 220VAC~280VAC<br>Step size: long press for 10V, short press for 1V   |
| 38 | Utility low voltage disconnect voltage                       | AGM *UP11<br>3 8 88.0'                                 | 88.0V(Default for the 110V system)<br>User define: 80VAC~110VAC<br>Step size: long press for 10V, short press for 1V   |
|    |  | AGM *UP12<br>3 8 176.0'                                | 176.0V(Default for the 220V system)<br>User define: 90VAC~190VAC<br>Step size: long press for 10V, short press for 1V  |
| 39 | Battery discharge current limit<br>Refer to 3.7 for details. | AGM *E1C<br>3 9 250.0 A                                | UP2000-HM6021/UP2000-HM6022:<br>200A(Default) User define: 10~200A<br>UP3000-HM5041/UP3000-HM5042/UP3000-HM8041: 150A(Default) User define:10~150A<br>UP3000-HM10021/UP3000-HM10022:<br>300A(Default) User define: 10~300A<br>UP5000-HM8042: 250A(Default)<br>User define:10~250A<br>Step size: Long press for 10A, short press for 1A |
| 40 | Lithium battery protocol type                                | AGM *PRO<br>4 0 1                                      | 1(Default)<br>User Define:1~200<br><b>NOTE: Refer to the “1.2 Identification of parts &gt; ① BMS-Link connection port(RJ45)” for details.</b>  |
| 41 | BMS enable   | AGM *BEN<br>4 1 OFF                                    | OFF(Default), disable the BMS function.<br>ON, enable the BMS function.<br>• <b>Normal BMS comm.:</b> The BMS controls the UP-Hi charge/discharge.<br>• <b>Error BMS comm.:</b> The UP-Hi automatically enters the no-battery mode and displays BME.   |
| 42 | Battery capacity   | AGM *SOC<br>4 2 OFF                                    | OFF(Default)<br>ON: The SOC parameters are cleared and recalculated.   |
| 43 | Meter software version                                       | AGM *MSV<br>4 3 U110                                   | It cannot be modified.<br><b>NOTE: Detail version refers to the actual display.</b>  |

|    |                              |  |  |
|----|------------------------------|--|--|
| 44 | Power board software version |  |  |
|----|------------------------------|--|--|

### 3.5.1 Battery voltage customized logic.

For the above items 7-16 and 33-36, please follow the below rules strictly.

1) **In the 24V input voltage system, the following rules must be followed when modifying the parameter values in the user battery type for a Lead-acid battery.**

- A. Over Voltage Disconnect Voltage  $\geq$  Over Voltage Reconnect Voltage + 0.5V
- B. Over Voltage Disconnect Voltage > Charging Limit Voltage  $\geq$  Equalize Charging Voltage  $\geq$  Boost Charging Voltage  $\geq$  Float Charging Voltage > Boost Voltage Reconnect Voltage
- C. Low Voltage Reconnect Voltage  $\geq$  Low Voltage Disconnect Voltage + 0.5V
- D. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage  $\geq$  Discharging Limit Voltage (21.2V)
- E. Under Voltage Warning Reconnect Voltage - 0.5V  $\geq$  Under Voltage Warning Voltage  $\geq$  Discharging Limit Voltage (21.2V)
- F. Boost Voltage Reconnect Voltage > Low Voltage Disconnect Voltage

2) **In the 48V input voltage system, the following rules must be followed when modifying the parameter values in the user battery type for a Lead-acid battery.**

- A. Over Voltage Disconnect Voltage  $\geq$  Over Voltage Reconnect Voltage + 1V
- B. Over Voltage Disconnect Voltage > Charging Limit Voltage  $\geq$  Equalize Charging Voltage  $\geq$  Boost Charging Voltage  $\geq$  Float Charging Voltage > Boost Voltage Reconnect Voltage
- C. Low Voltage Reconnect Voltage  $\geq$  Low Voltage Disconnect Voltage + 1V
- D. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage  $\geq$  Discharging Limit Voltage (42.4V)
- E. Under Voltage Warning Reconnect Voltage - 1V  $\geq$  Under Voltage Warning Voltage  $\geq$  Discharging Limit Voltage (42.4V)
- F. Boost Voltage Reconnect Voltage > Low Voltage Disconnect Voltage

3) **In the 24V input voltage system, the following rules must be followed when modifying the parameter values in the user battery type for a lithium battery.**

- A. Over Voltage Disconnect Voltage  $\geq$  Over Voltage Reconnect Voltage + 0.5V
- B. Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage = Charging Limit Voltage  $\geq$  Equalize Charging Voltage = Boost Charging Voltage  $\geq$  Float Charging Voltage > Boost Voltage Reconnect Voltage
- C. Low Voltage Reconnect Voltage  $\geq$  Low Voltage Disconnect Voltage + 0.5V
- D. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage  $\geq$  Discharging Limit

Voltage(21.2V)

- E. Under Voltage Warning Reconnect Voltage-0.5V  $\geq$  Under Voltage Warning Voltage  $\geq$  Discharging Limit Voltage(21.2V)
- F. Boost Voltage Reconnect Voltage > Low Voltage Reconnect Voltage
- 4) **In the 48V input voltage system, the following rules must be followed when modifying the parameter values in the user battery type for a lithium battery.**
- A. Over Voltage Disconnect Voltage  $\geq$  Over Voltage Reconnect Voltage+1V
- B. Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage = Charging Limit Voltage  $\geq$  Equalize Charging Voltage = Boost Charging Voltage  $\geq$  Float Charging Voltage > Boost Voltage Reconnect Voltage
- C. Low Voltage Reconnect Voltage  $\geq$  Low Voltage Disconnect Voltage+1V
- D. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage  $\geq$  Discharging Limit Voltage(42.4V)
- E. Under Voltage Warning Reconnect Voltage-1V  $\geq$  Under Voltage Warning Voltage  $\geq$  Discharging Limit Voltage(42.4V)
- F. Boost Voltage Reconnect Voltage > Low Voltage Reconnect Voltage



**WARNING**

The lithium battery's voltage parameters must be set according to the voltage parameters of BMS.

### 3.5.2 Battery control strategy


When the lithium battery protocol and parameters setting accord with anyone of the following cases, the table (1) control strategy are followed.

- Adopt PYLONTECH lithium battery protocol: Set item 40 "PRO" as "11".
- Adopt non-PYLONTECH lithium battery protocol: Set item 40 "PRO" as the current lithium battery protocol number (refer to the *UP-Hi Attachment* for different lithium battery protocol numbers), and set item 41 "BEN" as "ON" (enable the BMS function).

➤ **Table (1): Control strategy**

| No. | Condition   | Control strategy  |
|-----|---|---|
| 1   | The real utility input voltage is within the available utility range (detail range refers to <b>Z Specifications</b> ). | <ul style="list-style-type: none"><li>• The inverter/charger limits the battery discharge according to the BMS "discharge current limit".</li><li>• No BMS "discharge current limit", the inverter/charger limits the battery discharge according to the limit current set by the customer.</li></ul> |

|   |  |  |
|---|--|--|
| 2 | No utility or the utility input voltage is beyond the available utility range.             | The inverter/charger limits the battery discharge according to the limit current set by the customer.  |
| 3 | Battery charge is requested.   | The inverter/charger charges the battery per the charging current of the BMS.  |
| 4 | The BMS sends an exit charge command.  | The inverter/charger exits the battery charging and resumes normal working mode.   |
| 5 | BMS prohibits discharge (includes over-temperature, over discharge, cell low voltage etc.) | <ul style="list-style-type: none"> <li>The PV supplies power to loads when the PV is available.</li> <li>The inverter/charger automatically switches to the utility mode to supply power to loads when there is no PV.</li> </ul> <p><b>Note: When the BMS resumes normal discharge, the previous working mode is restored.</b></p>  |
| 6 | Communication fails.   | The inverter/charger automatically enters the no-battery mode, and the LCD display the battery voltages set by the customer.<br><b>Note: Under the no-battery mode, the inverter/charger does not charge or discharge the battery in any way.</b>  |
| 7 | Read the charge voltage limit and the discharge voltage limit from the BMS *               | The battery voltages are transformed per the <b>Table (2): Battery voltage transformation</b> . The transformed voltages are adopted to control the charging or discharging, and displayed on the local LCD.<br><b>Note: The BMS communication is normal, while the charge voltage limit and the discharge voltage limit cannot be read from the BMS successfully, the inverter/charger will charge or discharge per the battery voltages set by the customer.</b> |
| 8 | Read the charge current limit and the discharge current limit from the BMS                 | The inverter/charger limits the device charge/discharge current per the read value.  |

|   |   |
|---|---|
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>When adopting the PYLONTECH lithium battery protocol, the battery mode (BTS) cannot be set.</li> <li>When the customer sets the lithium battery protocol ("PRO" parameter) to the non-PYLONTECH protocol, the inverter/charger exits the above control strategy and works per the customer setting.</li> <li>Adopt the non-PYLONTECH protocol and disable the BMS function (namely, item 41 "BEN" is set to "OFF"), the inverter/charger exits the above control strategy and works per the customer setting.</li> </ul> |
|---|---|

★ For PYLONTECH lithium battery, refer to its battery specification for the charge voltage limit and the discharge voltage limit. Whether other lithium batteries are equipped with the two limit voltage, please refer to detail battery specification.

➤ **Table (2): Battery voltage transformation**

| No. | Code | Battery voltage                 | Transformation   |
|-----|------|---------------------------------|--|
| 1   | OVD  | Over Voltage Disconnect Voltage | Charge voltage limit + 0.3*Level   |
| 2   | CLV  | Charge Voltage Limit Voltage    | Charge voltage limit (namely, the battery pack over voltage warning voltage)     |
| 3   | OVR  | Over Voltage Reconnect Voltage  | Charge voltage limit   |
| 4   | ECV  | Equalize Charging Voltage       | Charge voltage limit -0.1* Level   |
| 5   | BCV  | Boost Charging Voltage          | Charge voltage limit -0.1* Level   |
| 6   | FCV  | Float Charging Voltage          | Charge voltage limit -0.1* Level   |
| 7   | BVR  | Boost Voltage Reconnect Voltage | Charge voltage limit -0.8* Level   |
| 8   | LVR  | Low Voltage Reconnect Voltage   | Discharge voltage limit +0.7* Level  |
| 9   | UVR  | Under Voltage Reconnect Voltage | Discharge voltage limit +0.7* Level  |
| 10  | UVW  | Under Voltage Warning Voltage   | Discharge voltage limit +0.4* Level  |
| 11  | LVD  | Low Voltage Disconnect Voltage  | Discharge voltage limit (namely, the battery pack under voltage warning voltage) |
| 12  | DLV  | Discharge Voltage Limit Voltage | Discharge voltage limit -0.7* Level  |

Note: “Level” is 1 for 12V system, 2 for 24V system, and 4 for 48V system.


### 3.6 Battery discharge current limit

The function is suitable for the current limiting requirements of lithium batteries.

**Abbreviation:**

|                        |  |
|------------------------|--|
| <b>V<sub>BAT</sub></b> | Battery voltage                                      |
| <b>V<sub>OUT</sub></b> | Inverter output voltage                              |
| <b>I<sub>BAT</sub></b> | Actual battery current                               |
| <b>UMI</b>             | Utility low voltage disconnection voltage            |
| <b>BDC</b>             | Battery discharge current limit value(Setting value) |
| <b>BDC-MAX</b>         | Max. Battery discharge current limit value           |

**V—I curve:**

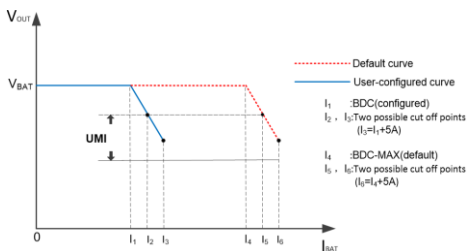

When the  $V_{OUT} \leq UMI$  or  $I_{BAT} \geq BDC+5A$ , the inverter will be turned off. If the utility is connected, the utility will supply power to the load.

## 4 Protections

| No. | Protection                  | Instruction  |
|-----|-----------------------------|--|
| 1   | PV limit current            | When the charging current of the PV array exceeds its rated current, it will be charged at the rated current.<br><b>NOTE: When the charging current exceeds the PV array's rated current, ensure the PV open-circuit voltage no exceed the "maximum PV open-circuit voltage." Otherwise, the inverter/charger may be damaged.</b>  |
| 2   | PV reverse polarity         | Fully protect against PV reverse polarity, correct the wire connection to resume the regular operation.  |
| 3   | Night reverse charging      | Prevent the battery from discharging through the PV module at night.   |
| 4   | Utility input over voltage  | In the 110V/120VAC system, when the utility voltage exceeds 132V (configurable), it will stop utility charging/discharging.<br>In the 220V/230VAC system, when the utility voltage exceeds 264V (configurable), it will stop utility charging/discharging.   |
| 5   | Utility input under voltage | In the 110V/120VAC system, when the utility voltage is less than 88V (configurable), it will stop utility charging/discharging.<br>In the 220V/230VAC system, when the utility voltage is less than 176V (configurable), it will stop utility charging/discharging.  |
| 6   | Utility input over current  | Utility input current higher than a specified value, the device will go into protection mode automatically. Press the over-current protection device to resume working when the utility input current decreases to the expected value.   |
| 7   | Battery reverse polarity    | When the PV array and utility are not connected with the inverter/charger, reverse battery polarity will not damage the inverter/charger. It will resume normal running after the mis-wiring is corrected.   |
| 8   | Battery over voltage        | When the battery voltage reaches the Over Voltage Disconnect Voltage point, the inverter/charger will stop charging the battery to prevent battery damage due to over charged.   |
| 9   | Battery over discharge      | When the battery voltage reaches the Low Voltage Disconnect Voltage point, the inverter/charger will automatically stop discharging the battery to prevent battery damage due to over discharge.   |
| 10  | Load output short circuit   | When a short circuit occurs at the load output terminal, the output will be turned off immediately. The output will then be automatically restored after a delay (the first time delay for 5s, the second time delay for 10s, the third time delay for 15s). If the short circuit remains after three times delay, clear the fault and then restart the inverter/charger to resume work. |



|    |                              |   |  |     |
|----|------------------------------|---|--|-----|
| 11 | Overload                     | Times of overload   | 1.3  | 1.5 |
|    |                              | Continuance   | 10S  | 5S  |
|    |                              | Recover three times   | The first time delay for 5s, the second time delay for 10s, the third time delay for 15s |     |
| 12 | Inverter/charger overheating | The inverter/charger will stop charging/discharging when the internal temperature is too high and will resume charging/discharging when the temperature is recovered to normal. |  |     |

# 5 Troubleshooting

## 5.1 Status reference

| Type           | Code                  | Instruction                            | battery frame blink | Indicator               | Buzzer | Fault Indicator |
|----------------|-----------------------|--|---------------------|-------------------------|--------|-----------------|
| PV faults      | <i>POV</i>            | PV over voltage                        | --                  | PV charge fast flashing | Alarm  | On Solid        |
|                | <i>POC</i>            | PV over current                        | --                  | --                      | --     | --              |
|                | <i>PVA</i>            | PV voltage abnormal                    | --                  | --                      | --     | --              |
|                | <i>PLL</i>            | PV Power low                           | --                  | --                      | --     | --              |
|                | <i>POT</i>            | PV over temperature                    | --                  | --                      | --     | --              |
| Utility faults | <i>ULV</i>            | Utility low voltage                    | --                  | Utility fast flashing   | --     | --              |
|                | <i>UVV</i>            | Utility over voltage                   | --                  | Utility fast flashing   | Alarm  | On Solid        |
|                | <i>UFA</i>            | Utility frequency abnormal             | --                  | Utility fast flashing   | Alarm  | On Solid        |
| Battery faults | <i>BLV</i>            | Battery low voltage                    | Flashing            | --                      | --     | --              |
|                | <i>BOV</i>            | Battery over voltage                   | Flashing            | --                      | --     | --              |
|                | <i>BOD</i>            | Battery over discharge                 | Flashing            | --                      | --     | --              |
|                | <i>BCP</i>            | Battery charging warning or protection | Flashing            | --                      | --     | --              |
|                | <i>COV</i>            | Cell over voltage                      | Flashing            | --                      | --     | --              |
|                | <i>CUV</i>            | Cell under voltage                     | Flashing            | --                      | --     | --              |
|                | <i>CLT</i>            | Cell low temperature                   | Flashing            | --                      | --     | --              |
| <i>COT</i>     | Cell over temperature | Flashing                               | --                  | --                      | --     |                 |
| Output faults  | <i>OVA</i>            | Output voltage abnormal                | --                  | Inverter fast flashing  | Alarm  | On Solid        |
|                | <i>OSC</i>            | Output short circuit                   | --                  | Inverter fast flashing  | Alarm  | On Solid        |
|                | <i>OOL</i>            | Output overload                        | --                  | Inverter fast flashing  | Alarm  | On Solid        |
| Others         | <i>HOV</i>            | Hardware over voltage                  | --                  | --                      | --     | --              |
|                | <i>MOV</i>            | Bus over voltage                       | --                  | --                      | --     | --              |
|                | <i>MLV</i>            | Bus under voltage                      | --                  | --                      | --     | --              |
|                | <i>OTP</i>            | Heat sink over temperature             | --                  | --                      | --     | --              |
|                | <i>LTP</i>            | Battery low temperature                | --                  | --                      | --     | --              |
|                | <i>CFA</i>            | Communication fault alarm              | --                  | --                      | --     | --              |

|                   |     |   |          |    |    |    |
|-------------------|-----|---|----------|----|----|----|
| <b>BMS status</b> | BMS | Other faults of the battery management system | Flashing | -- | -- | -- |
|                   | NTC | BMS sensor fault                              | Flashing | —  | —  | —  |
|                   | BDP | BMS discharge protection                      | Flashing | —  | —  | —  |
|                   | BME | BMS communication error <sup>(1)</sup>        | —        | —  | —  | —  |
|                   | BFC | BMS full charge <sup>(2)</sup>                | —        | —  | —  | —  |
|                   | BSC | BMS charge protection                         | —        | —  | —  | —  |
|                   | BSD | BMS discharge protection                      | —        | —  | —  | —  |
|                   | RLC | BMS limit current <sup>(3)</sup>              | —        | —  | —  | —  |

(1) Enable the BMS function first (Set item BEN to ON). When the BMS communication fails, the UP-Hi automatically enters the no-battery mode and displays BME.

(2) When the battery is fully charged and the SOC reaches 100%, the charging process is stopped and the BFC is displayed (without indicator and buzzer warning).

(3) Enable the BMS function first (Set item BEN to ON). After reading the BMS charge/discharge current threshold, the threshold value is adopted for working. The 12 local voltage points and the threshold value cannot be set.

## 5.2 Solutions

| Faults                 | Solutions  |
|------------------------|--|
| Battery over voltage   | Check whether the battery voltage is too high and disconnect the PV modules.   |
| Battery over discharge | Waiting for the battery voltage to resume to or above LVR point (low voltage reconnect voltage) or changing the power supply method. |
| Battery overheating    | When the battery temperature declines to the overheating recovery temperature or lower, the inverter/charger will resume working.    |
| Device overheating     | When the device temperature declines to the overheating recovery temperature or lower, the inverter/charger will resume working.     |
| Output overload        | ① Please reduce the number of AC loads.<br>② Restart the device to recover the load output.  |
| Output short circuit   | ① Check carefully loads connection, clear the fault.<br>② Restart the device to recover the load output.                             |

## 6 Maintenance

### 1) The following inspections and maintenance tasks are recommended at least two times per year for the best performance.

- Make sure the inverter/charger is firmly installed in a clean and dry ambient.
- Make sure no block on airflow around the inverter/charger. Clear up any dirt and fragments on the radiator.
- Check all the naked wires to ensure insulation is not damaged for serious solarization, frictional wear, dryness, insects or rats, etc. Repair or replace some wires if necessary.
- Tighten all the terminals. Inspect for loose, broken, or burnt wire connections.
- Check and confirm that LED or LCD is consistent with the actual operating. Pay attention to any troubleshooting or error indication. Then, take the necessary corrective action.
- Confirm that all the system components are ground connected tightly and correctly.
- Confirm that all the terminals have no corrosion, insulation damaged, high temperature, or burnt/discolored sign. Then, tighten terminal screws to the suggested torque.
- Check for dirt, nesting insects, and corrosion. If so, clear up in time.
- Check and confirm the lightning arrester is in good condition. Replace a new one in time to avoid damaging the inverter/charger and even other equipment.

**WARNING**

Risk of electric shock! Ensure that all the power is turned off before the above operations, and then follow the corresponding inspections and operations.

### 2) The warranty does not apply to the following conditions:

- Damage is caused by improper use or an inappropriate environment.
- Load current/voltage/power exceeds the limit value of the inverter/charger.
- Damage caused by working temperature exceeds the rated range.
- Arc, fire, explosion, and other accidents are caused by failure to follow the inverter/charger stickers or manual instructions.
- Disassemble and repair the inverter/charger without authorization.
- Damage is caused by force majeure.
- Damage occurred during transportation or handling.

## 7 Specifications

| Item                          | UP2000-HM6021  | UP3000-HM10021 | UP3000-HM5041 | UP3000-HM8041 |
|-------------------------------|--|----------------|---------------|---------------|
| Rated battery voltage         | 24VDC  |                | 48VDC         |               |
| Battery input voltage         | 21.6~32VDC   |                | 43.2~64VDC    |               |
| Max. battery charging current | 60A  | 100A           | 50A           | 80A           |
| <b>Inverter output</b>        |  |                |               |               |
| Continuous output power       | 2000W  | 3000W          | 3000W         | 3000W         |
| Max. surge power(3S)          | 4000W  | 6000W          | 6000W         | 6000W         |
| Output voltage range          | 110VAC(-3%~+3%), 120VAC(-10%~+3%)  |                |               |               |
| Output frequency              | 50/60±0.2%   |                |               |               |
| Output wave                   | Pure Sine Wave   |                |               |               |
| Load power factor             | 0.2-1(Load power ≤ Continuous output power)  |                |               |               |
| Distortion THD                | THD≤5%(Resistive load)   |                |               |               |
| 80% rated output efficiency   | 89%  | 90%            | 91%           | 91%           |
| Max. Rated output efficiency  | 88%  | 88%            | 90%           | 90%           |
| Max. output efficiency        | 90%  | 92%            | 92%           | 92%           |
| Switch time                   | 10ms(Switch from the utility output to the inverter output), 15ms(Switch from the inverter output to the utility output) |                |               |               |
| <b>Utility charging</b>       |  |                |               |               |
| Utility input voltage         | 88VAC~132VAC (Default), 80VAC~140VAC(Programmable)   |                |               |               |
| Utility input frequency       | 40~65Hz  |                |               |               |
| Max. utility charge current   | 60A  | 80A            | 40A           | 40A           |
| <b>Solar charging</b>         |  |                |               |               |

|                                |  |                   |                    |                   |
|--------------------------------|--|-------------------|--------------------|-------------------|
| Max. PV open circuit voltage   | 250V <sup>①</sup> , 220V <sup>②</sup>  |                   |                    |                   |
| MPPT voltage range             | 60~200V  |                   |                    |                   |
| Max. PV input power            | 2000W  | 3000W             | 3000W              | 4000W             |
|                                | (Note: For the curve of Max. PV input power Vs. PV open-circuit voltage, see chapter Appendix1 for details.) |                   |                    |                   |
| Max. PV charging power         | 1725W  | 2875W             | 2875W              | 4000W             |
| Max. PV charging current       | 60A  | 100A              | 50A                | 80A               |
| Equalize charging voltage      | 29.2V(AGM default)   |                   | 58.4V(AGM default) |                   |
| Boost charging voltage         | 28.8V(AGM default)   |                   | 57.6V(AGM default) |                   |
| Float charging voltage         | 27.6V(AGM default)   |                   | 55.2V(AGM default) |                   |
| Low voltage disconnect voltage | 21.6V(AGM default)   |                   | 43.2V(AGM default) |                   |
| Tracking efficiency            | ≥99.5%   |                   |                    |                   |
| Temp. compensate coefficient   | -3mV/°C/2V(Default)  |                   |                    |                   |
| <b>General</b>                 |  |                   |                    |                   |
| Surge current ★                | 50A  | 60A               | 56A                | 95A               |
| Zero load consumption          | <1.6A  | <1.6A             | <1.2A              | <0.8A             |
|                                | (without PV and utility connection, turn on the load output)   |                   |                    |                   |
| Standby current                | <1.2A  | <1.0A             | <0.7A              | <0.6A             |
|                                | (without PV and utility connection, turn off the load output)  |                   |                    |                   |
| <b>Mechanical Parameters</b>   |  |                   |                    |                   |
| Dimension(H x W x D)           | 607.5x381.6x127mm  | 642.5x381.6x149mm | 642.5x381.6x149mm  | 642.5x381.6x149mm |
| Mounting size                  | 585x300mm  | 620x300mm         | 620x300mm          | 620x300mm         |
| Mounting hole size             | Φ10mm  | Φ10mm             | Φ10mm              | Φ10mm             |
| Net Weight                     | 15kg   | 19kg              | 19kg               | 19kg              |

① At minimum operating environment temperature

② At 25°C environment temperature

★ Only UP-Hi with anti-surge function has the surge current parameter.

| Item                          | UP2000-HM6022  | UP3000-HM10022  | UP3000-HM5042   | UP5000-HM8042   |
|-------------------------------|--|---|---|---|
| Rated battery voltage         | 24VDC  |   | 48VDC   |   |
| Battery input voltage         | 21.6~32VDC   |   | 43.2~64VDC  |   |
| Max. battery charging current | 60A  | 100A  | 50A   | 80A   |
| <b>Inverter output</b>        |  |   |   |   |
| Continuous output power       | 2000W  | 3000W   | 3000W   | 5000W   |
| Max. surge power(3S)          | 4000W  | 6000W   | 6000W   | 8000W   |
| Output voltage range          | 220VAC(-6%~+3%), 230VAC(-10%~+3%)  |   |   |   |
| Output frequency              | 50/60±0.2%   |   |   |   |
| Output wave                   | Pure Sine Wave   |   |   |   |
| Load power factor             | 0.2-1(Load power ≤ Continuous output power)  |   |   |   |
| Distortion THD                | THD≤3%(Resistive load)   |   |   |   |
| 80% rated output efficiency   | 92%  | 92%   | 92%   | 92%   |
| Max. Rated output efficiency  | 91%  | 91%   | 90%   | 91%   |
| Max. output efficiency        | 93%  | 93%   | 93%   | 93%   |
| Switch time                   | 10ms(Switch from the utility output to the inverter output), 15ms(Switch from the inverter output to the utility output) |   |   |   |
| <b>Utility charging</b>       |  |   |   |   |
| Utility input voltage         | 176VAC~264VAC (Default), 90VAC~280VAC(Programmable)  |   |   |   |
| Utility input frequency       | 40~65Hz  |   |   |   |
| Max. utility charge current   | 60A(When the Utility input voltage is 90VAC~180VAC, the Max. utility charge current is                                   | 80A(When the Utility input voltage is 90VAC~180VAC, the Max. utility charge current | 40A(When the Utility input voltage is 90VAC~180VAC, the Max. utility charge current is 20A) | 60A(When the Utility input voltage is 90VAC~180VAC, the Max. utility charge current is 30A) |

|                                |   |                   |                    |  |
|--------------------------------|---|-------------------|--------------------|--|
|                                | 30A)  | is 40A)           |                    |  |
| <b>Solar charging</b>          |   |                   |                    |  |
| Max. PV open circuit voltage   | 450V <sup>①</sup> , 395V <sup>②</sup>   |                   |                    | 500V <sup>①</sup><br>440V <sup>②</sup> |
| MPPT voltage range             | 80~350V   |                   |                    | 120~400V                               |
| Max. PV input power            | 2500W   | 4000W             | 4000W              | 4000W                                  |
|                                | (Note: For the curve of Max. PV input power Vs. PV open-circuit voltage, see chapter Appendix 1 for details.) |                   |                    |  |
| Max. PV charging power         | 1725W   | 2875W             | 2875W              | 4000W                                  |
| Max. PV charging current       | 60A   | 100A              | 50A                | 80A                                    |
| Equalize charging voltage      | 29.2V(AGM default)  |                   | 58.4V(AGM default) |  |
| Boost charging voltage         | 28.8V(AGM default)  |                   | 57.6V(AGM default) |  |
| Float charging voltage         | 27.6V(AGM default)  |                   | 55.2V(AGM default) |  |
| Low voltage disconnect voltage | 21.6V(AGM default)  |                   | 43.2V(AGM default) |  |
| Tracking efficiency            | ≥99.5%  |                   |                    |  |
| Temp. compensate coefficient   | -3mV/°C/2V(Default)   |                   |                    |  |
| <b>General</b>                 |   |                   |                    |  |
| Surge current ★                | 50A   | 60A               | 56A                | 95A                                    |
| Zero load consumption          | <1.8A   |                   | <1.2A              |  |
|                                | (without PV and utility connection, turn on the load output)  |                   |                    |  |
| Standby current                | <1.2A   |                   | <0.7A              |  |
|                                | (without PV and utility connection, turn off the load output)   |                   |                    |  |
| <b>Mechanical Parameters</b>   |   |                   |                    |  |
| Dimension(H x W x D)           | 607.5x381.6x127mm   | 642.5x381.6x149mm | 607.5x381.6x149mm  | 642.5x381.6x149mm                      |
| Mounting size                  | 585x300mm   | 620x300mm         | 585x300mm          | 620x300mm                              |
| Mounting hole size             | Φ10mm   | Φ10mm             | Φ10mm              | Φ10mm                                  |



|            |      |      |      |      |
|------------|------|------|------|------|
| Net Weight | 15kg | 19kg | 18kg | 19kg |
|------------|------|------|------|------|

① At minimum operating environment temperature      ② At 25°C environment temperature

★ Only UP-Hi with anti-surge function has the surge current parameter.

**Environment Parameters**


|                         |  |
|-------------------------|--|
| Enclosure               | IP30   |
| Relative humidity       | < 95% (N.C.)   |
| Environment temperature | -20°C~50°C   |
| Storage temperature     | -25°C~60°C   |
| Altitude                | <5000m(If the altitude exceeds 1000 meters, the actual output power is reduced according to IEC62040.) |

## Appendix 1 PV open-circuit voltage Vs input power

Detailed PV open-circuit voltage and Max. PV input power is shown as below:


| Model          | Min. PV working voltage | Max. PV open-circuit voltage               | Max. PV input power |
|----------------|-------------------------|--|---------------------|
| UP2000-HM6021  | 60V                     | 250V(At minimum temperature)<br>220V(25°C) | 2000W               |
| UP2000-HM6022  | 80V                     | 450V(At minimum temperature)<br>395V(25°C) | 2500W               |
| UP3000-HM5041  | 60V                     | 250V(At minimum temperature)<br>220V(25°C) | 3000W               |
| UP3000-HM5042  | 80V                     | 450V(At minimum temperature)<br>395V(25°C) | 4000W               |
| UP3000-HM8041  | 60V                     | 250V(At minimum temperature)<br>220V(25°C) | 4000W               |
| UP3000-HM10021 | 60V                     | 250V(At minimum temperature)<br>220V(25°C) | 3000W               |
| UP3000-HM10022 | 80V                     | 450V(At minimum temperature)<br>395V(25°C) | 4000W               |
| UP5000-HM8042  | 120V                    | 500V(At minimum temperature)<br>440V(25°C) | 4000W               |

➤ UP2000-HM6021, UP2000-HM6022

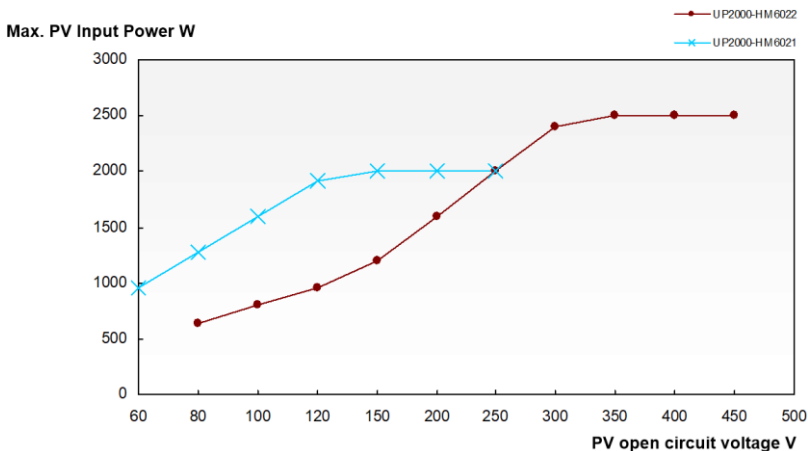


➤ UP3000-HM5041, UP3000-HM5042, UP3000-HM8041, UP3000-HM10021, UP3000-HM10022

Max. PV Input Power W

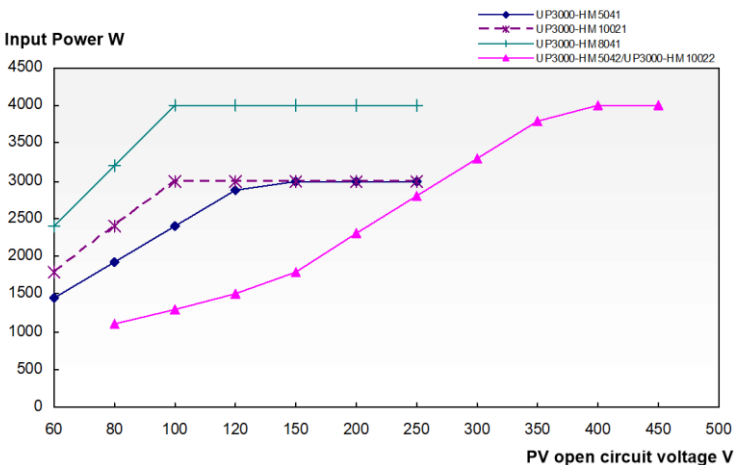

➤ UP5000-HM8042

Max. PV Input Power W

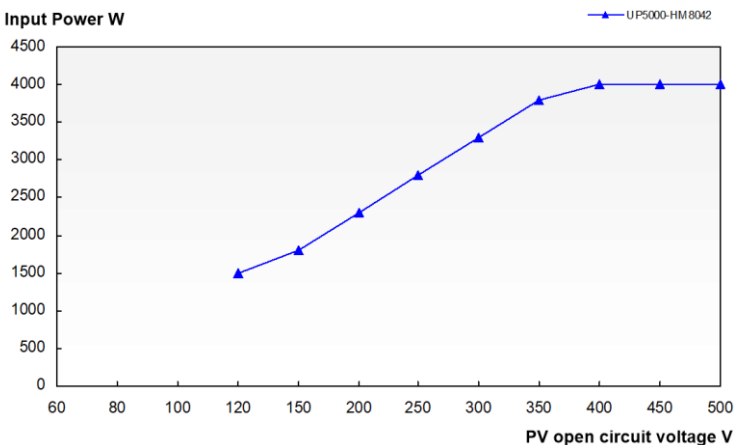

Any changes without prior notice! Version number: V2.4

**HUIZHOU EPEVER TECHNOLOGY CO., LTD.**

**Beijing Tel: +86-10-82894896/82894112**

**Huizhou Tel: +86-752-3889706**

**E-mail: [info@epever.com](mailto:info@epever.com)**

**Website: [www.epever.com](http://www.epever.com)**